

RecyClass

RECYCLABILITY EVALUATION PROTOCOL

FOR PP CONTAINERS

STANDARD LABORATORY PRACTICE

CONTENT

CONTENT	2
GLOSSARY	3
1. INTRODUCTION AND PURPOSE OF THE PROTOCOL	5
2. SCOPE OF THE PROTOCOL	6
3. DISCLAIMER	6
4. LABORATORY TEST METHODOLOGY	6
4.1 CONTROL SELECTION	8
4.2 PRE-TREATMENT STEPS	8
4.2.1 GRINDING	8
4.2.2 WASHING	8
4.2.3 FLOTATION TEST	9
4.2.4 DRYING	10
4.2.5 AIR ELUTRIATION	10
5. EXTRUSION	11
5.1 FLAKE BLENDS PREPARATION	11
5.2 FLAKE BLENDS COMPOSITION	11
5.3 PELLET PRODUCTION	12
5.3.1 FILTRATION TEST (OPTIONAL)	13
5.3.2 PELLET PROPERTIES EVALUATION	14
5.3.3 INJECTION MOULDING	15
5.3.4 PROPERTIES EVALUATION	15
6. CONVERSION	16
6.1 PELLET BLENDS PREPARATION	16
6.2 PELLET BLENDS COMPOSITION	16
6.3 BOTTLES BLOW MOULDING	17
6.3.1 BOTTLE PROPERTIES EVALUATION	18
6.3.2 TENSILE PROPERTIES TESTING	18
6.4 SHEET EXTRUSION	19
6.4.1 SHEET PROPERTIES EVALUATION	20
ANNEX I – CONTROL SAMPLES SELECTION	21

GLOSSARY

A.0	100% control flakes
A.25	blend 75/25 control/innovation flakes
A.50	blend 50/50 control/innovation flakes
A.100	blend 100% innovation flakes
ASTM	American Society for Testing and Materials
B.0	bottle with 100% control pellets
B.25	bottle with 87,5/12,5 control/innovation pellets
B.50	bottle with 75/25 control/innovation pellets
B.100	bottle with 50/50 control/innovation pellets
C.0	sheet with 100% control pellets
C.25	sheet with 87,5/12,5 control/innovation pellets
C.50	sheet with 75/25 control/innovation pellets
C.100	sheet with 50/50 control/innovation pellets
D.0	plate with 100% control pellets
D.25	plate with 75/25 control/innovation pellets
D.50	plate with 50/50 control/innovation pellets
D.100	plate with 100% innovation pellets
EN	European Standard
Innovation:	new container, flakes or pellets from innovative container which has to be tested
ISO	International Organization for Standardization
MFI	Melt Flow Index
PE	Polyethylene
PP	Polypropylene
PVC	Poly Vinyl Chloride
TC	Technical Committee
TGA	Thermo Gravimetric Analysis

RecyClass

DISCLAIMER

“RecyClass is an initiative aiming at enhancing and evaluating the recyclability of plastic packaging through a technical perspective. The Plastics Recyclability Evaluation Protocols will promote recyclability by encouraging industry to test new plastic technologies, materials or product before market launch and giving advice and recommendations to the companies.

The Recyclability Evaluation Protocols are available for download in the PRE and RecyClass websites. Companies providing plastic packaging concepts are encouraged to use them to self-assess the impact of their solutions on recyclability and highlight potential issues. **However, compliance to a Recyclability Evaluation Protocol is not a replacement for an official assessment and may not be used as a marketing tool.**

All tests must follow the Evaluation Protocols recommended by the RecyClass Technical Committees and must be conducted by an independent laboratory approved by RecyClass which has no legal affiliation to the applicant.

More information is reported in the RecyClass Internal Procedures available in the [RecyClass website](#).”

1. INTRODUCTION AND PURPOSE OF THE PROTOCOL

The “Recyclability Evaluation Protocol for PP Containers” referred to in this document as “The Protocol” describes the methodology that must be followed by the applicant at a laboratory scale in order to determine if a plastic packaging innovation is compatible with the post-consumer PP recycling stream. The Protocol targets companies responsible for introducing a packaging product into the market. The applicant shall proceed with the Protocol as established in the Assessment Process for Applicants of Recyclability Evaluation in the “RecyClass¹ Internal Procedures”.

The Protocol analyses whether an innovation will undergo the necessary pre-treatment, extrusion and conversion steps described in this methodology at a laboratory scale without negatively impacting the recycling process. It aims to guarantee recyclability² of plastics packaging while encouraging innovation in the PP market. The overall goal is to maintain the protection of packaged goods and their marketing display functions without obstructing the proper functioning of the PP recycling process.

This document provides guidance on the tests methodology that shall be followed, including benchmark recommendations to guide the interpretation of the results.

PP terminology as it is used in this document, refers to rigid plastic containers (bottles, thermoforming, thin wall packaging) predominantly used for packaging liquids, cosmetics, and detergents, as well as food contact applications.

1 RecyClass assesses the recyclability of a plastic package providing a ranking from A to F. RecyClass also provides specific indications and recommendations on how to improve packaging design to fit current recycling technologies. More information at <https://recyclclass.eu/>

2 Recyclability definition according to PRE & APR: Plastics must meet four conditions for a product to be considered recyclable: 1. The product must be made with a plastic that is collected for recycling, has market value and/or is supported by a legislatively mandated program. 2. The product must be sorted and aggregated into defined streams for recycling processes. 3. The product can be processed and reclaimed/recycled with commercial recycling processes. 4. The recycled plastic becomes a raw material that is used in the production of new products.

2. SCOPE OF THE PROTOCOL

The scope of the Protocol covers any innovation introduced to the existing packaging solutions for PP. Prior to initiating the evaluation, the applicant shall review the Design for Recycling Guidelines for natural and coloured PP containers³ in order to confirm that the PP innovation is compatible with these requirements.

The following packaging solutions and/or innovations are covered by the scope of this Protocol:

1. PP resins
2. Barrier and coating materials
3. Mineral fillers and additives
4. Non-PP closure systems and lidding films
5. Non-PP liners, seals, and valves
6. Non-PP labels and sleeves
7. Adhesives
8. Printing and Inks
9. Attachments

Packaging containing aluminium, metal, foam, degradable plastics, black carbon surface, as well as PVC shall be separately considered by the RecyClass PP Technical Committee in order to assess their suitability under the scope of this Protocol.

3. DISCLAIMER

The Protocol is created to represent as accurately as possible how the current PP recycling works at an industrial scale. RecyClass PP Technical Committee reserves the right for further testing if necessary, to issue an additional opinion on the recyclability of the tested packaging.

Within RecyClass, “easy-to-empty” and “easy-to-access” indexes are important factors when considering the recyclability of a package. At the state of the art, at PP mechanical recycling facilities washing operation typically uses mild conditions, no detergents nor strong chemicals. Consequently, any food residue constitutes an impurity for the recycling stream. RecyClass encourages testing to verify that the package is “easy-to-empty” and therefore ensures the minimum amount of leftover material at the end of its useful life. Nonetheless, this factor is beyond the scope of this Protocol.

4. LABORATORY TEST METHODOLOGY


This methodology aims to reproduce the recycling process at a small scale to determine the suitability of an innovation material for the PP recycling stream. The methodology described below shall be followed precisely and any modifications or problems must be noted during the testing phase. A Lab Evaluation Report compiling all the results obtained shall be prepared to report to the RecyClass Technical Committee which will interpret the final results. Any remarks during following the Protocol shall be also noted down.

See below in Figure 1 a diagram where the flow of the methodology is described.

³ Design for Recycling Guidelines <https://recyclass.eu/recyclass/design-for-recycling-guidelines/>

RecyClass

Figure1: Methodology Diagram

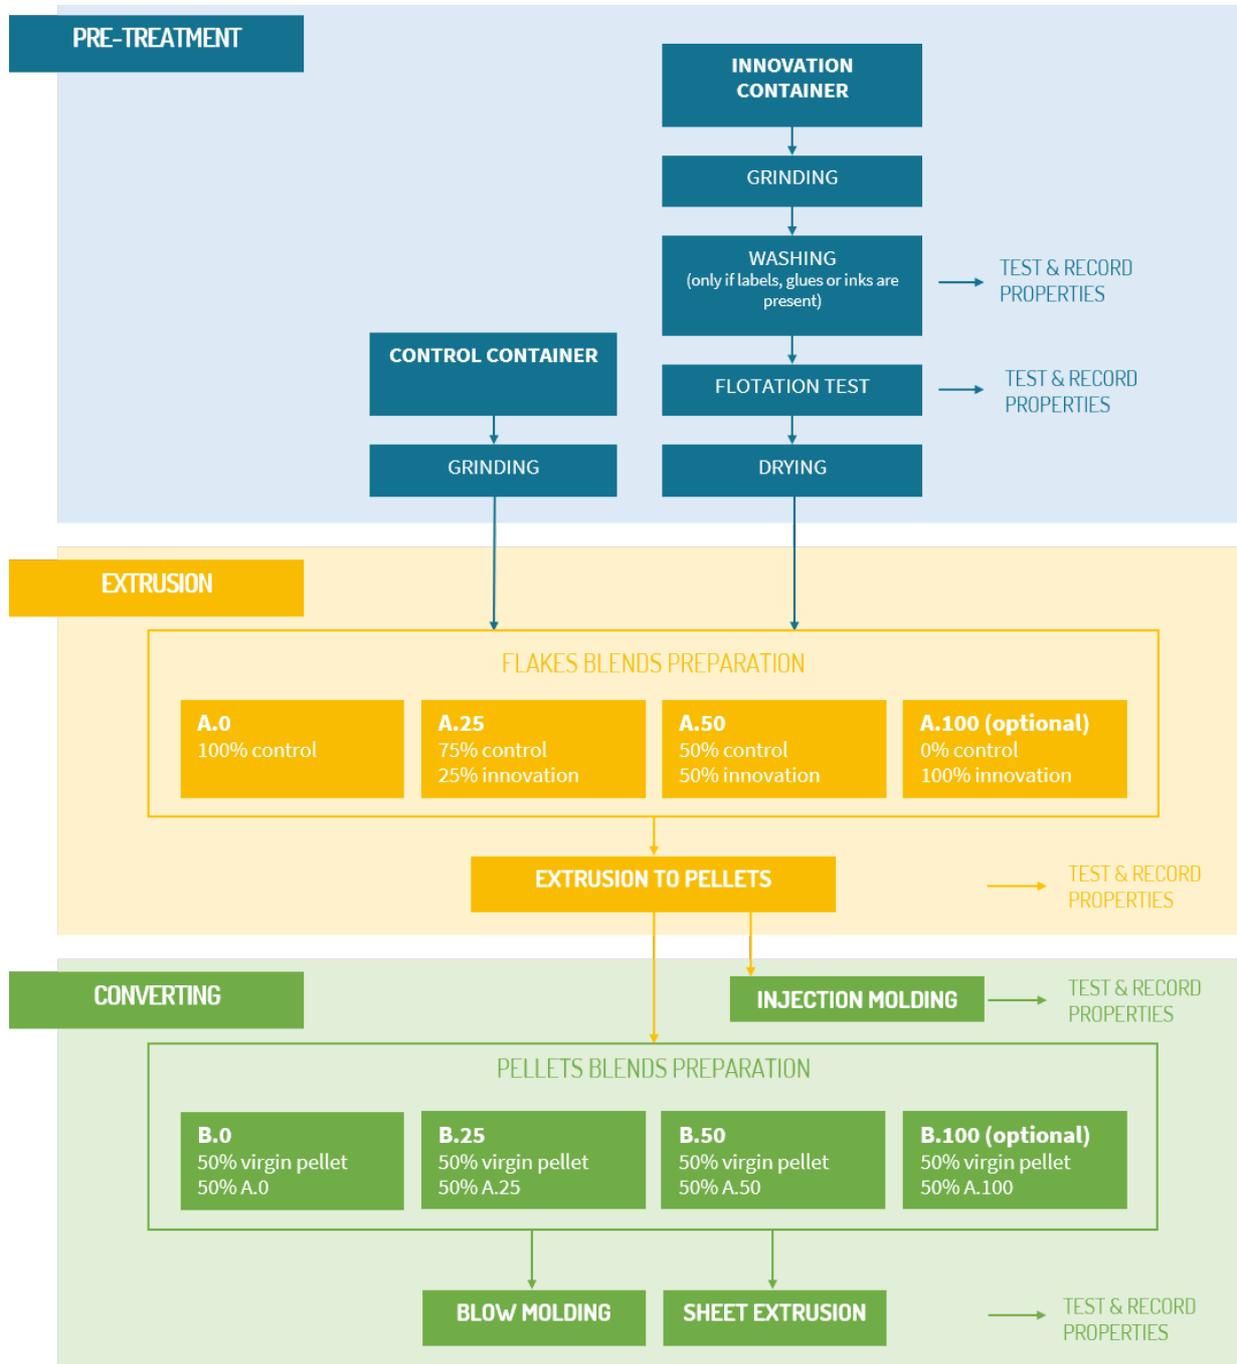

4.1 CONTROL SELECTION

The control PP for use following the Protocol can be selected by:

- **Option 1:** If there is a PP container on the market, similar to the innovation and is known to be recyclable, it can be selected as the control for this Protocol, with/upon the approval of the RecyClass PP TC.
- **Option 2:** If there is a PP container known to be recyclable, consisting of the same base PP virgin materials as the Innovation, except/apart from the specific ingredient/feature being evaluated, it can be selected as the control for this Protocol, with the approval of the RecyClass PP TC.
- **Option 3:** The Applicant can select a PP resin with the same critical technical specifications for MFI and density as the innovation article, $\pm 10\%$ and ± 0.005 density can be used as the control for this Protocol, with/upon the approval of RecyClass PP TC.

These options are to be used to make both the control flakes and the blends with innovation container flakes that will contain the additive, coating, label, adhesive or multilayer resin for the recycle study.

A selection of control samples to be used is reported in Annex I.

For the purpose of the tests the Applicant should provide at least 10 kg amount of innovation material (as packaging) and 25 kg amount of control material (as packaging) which allows for blend preparations of at least 5 kg each. More innovation material could be requested if optional tests are required by the RecyClass PP Technical Committee. It is worth pointing out that the innovation to be tested is not limited to the main body of the packaging but to all its parts. Therefore, the innovation has to be submitted to the laboratory procedures with labels, adhesives, closure system, liners, seals, valves (if any). If it can be correctly argued that labels and adhesives have no impact on the innovation, the innovation samples can be processed without the presence of labels and adhesives.

4.2 PRE-TREATMENT STEPS

4.2.1 GRINDING

Control and innovation PP containers are separately grinded in order to fit the throat of a standard laboratory extruder.

Procedure:

- Grind separately control and innovation sample to flakes of 3 to 15 mm.
- Store in separate containers.
- Recording the masses and running times.

4.2.2 WASHING

At the state of the art, European PP recycling lines use mild washing conditions, no detergents nor strong chemicals. The procedure takes care of labels, adhesives, coatings, paper, and printing present in the innovation PP container. If none of those are present, go directly to step 4.2.3.

The following procedures have to be utilized for both control and innovation samples, separately.

Procedure 1:

- Prepare the wash in a vessel at a 1:4 ratio (10 kg flakes vs 40 l water) with tap water. No added detergents or caustic soda.
- Heat the wash at 40°C.
- Wash each sample separately at a 1:4 ratio (10 kg flakes vs 40 l water) at 1.000 rpm for 5 minutes.
- Save a wash sample for visual evaluations
- Rinse the flakes in the strainer with cold running tap water and stir vigorously for 5 minutes using manual stirring bar. Then drain the material.
- Take photos at each step.

Save the wash and rinse water separately for visual observation. Record the presence of suspended particles or fibers within the water as well as any water coloration. Check and record if the glue has been diluted after the rinsing or it remains attached to film flakes.

4.2.3 FLOTATION TEST

Following the washing, the flotation process allows flake separation by density as occurring in the float/sink tank used in an industrial recycling line. For a suitable recycling, packaging design with combinations of polypropylene and other materials that float in water should be avoided. Non-PP components floating together with PP flakes cannot be further separated and are extruded with PP. This poses relevant concerns both in the process operations and in the quality of the recycle, undermining its applications such as containers and sheets.

The following procedure has to be utilized for both control and innovation samples, separately.

Procedure:

- Fill a vessel with tap water at a 1:6 ratio (10 kg washed flakes vs 60 l water).
- Put each sample separately in the water and stir at 500 rpm for 2 minutes.
- Stop the stirrer and allow the water to rest for 2 minutes.
- Remove all the materials that float at the surface with a sieve.
- Take photos of the floating and sinking fractions separately.
- Save the wash for visual evaluation.

The test is passed if 100% of olefin material is floating. It means non-PP material cannot stick or not get separated from PP and cause PP to sink, resulting in yield losses or stay with PP and contaminate the PP stream.

The efficiency of the sink/float separation should be measured using 50 g of washed flakes of innovative samples and a graduated beaker filled with tap water, as described by the following procedure. Repeat the procedure for washed and dried innovation flakes, with and without caps and labels.

RecyClass

Procedure:

- Fill a 1 l graduated beaker with 700 ml of tap water (pH between 7 and 8).
- Boil the water for 10 minutes, and then cool at room temperature.
- Transfer 300 ml of water in a graduated beaker.
- Put the innovative sample in the water and stir at 500 rpm for 2 minutes.
- Stop the magnetic stirrer and allow the water to rest for 2 minutes.
- Take photo of the beaker.
- Remove all particles that float at the surface with a sieve.
- Take photos of the floating and sinking fractions separately.
- Save the wash for visual evaluation.
- Dry the floating fraction for 1 hours at 80 °C in a bed desiccant or 3 hours at 65 °C with air.
- Cool to room temperature, weigh and record the weight of the float fraction.
- Repeat the procedure with 50 g of the innovation flakes without caps and labels (if any).
- Calculate the test efficiency as $(\text{weight of sinking fraction}) / (\text{weight of innovative sample}) \times 100$ (in %), separately for the innovation samples with and without caps and labels.

4.2.4 DRYING

Reduce the flake moisture with ambient air to release surface moisture to less than 1%.

Procedure:

- Dry the flakes collected after floatation with air at room temperature without the application of vacuum or heat sources until 1 % moisture content is reached. Stop the time.

4.2.5 AIR ELUTRIATION

Control and innovation PP flakes are separately elutriated with air to remove light fraction.

Procedure:

- Elutriate flakes with air with one pass and with less than 2% loss set for the control flakes.

5. EXTRUSION

5.1 FLAKE BLENDS PREPARATION

For each sample obtained, to evaluate and record the properties of innovation PP container against control as laid out in this Protocol, a set of flake blends is prepared as described in Table 1. Blends shall be produced once the control and innovation have separately gone through all pre-treatment steps described below.

Keep separated the control and innovation flakes obtained following the previous steps, and air dry for 24 h at ambient air. Then, according to the values reported in Table 1 prepare three different blends with 100% control (and 0% innovation), 75% control - 25% innovation, and 50% control - 50% innovation, and tag them respectively as A.0, A.25 and A.50.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 100% innovation, e.g. when the estimated market share is higher than 10% (i.e. A.100, by replacing the test with A.25).

For the purpose of the tests the Applicant should provide enough innovation and control materials which allows for the blend preparations. The laboratory carrying out the Protocol testing can define the amounts according to their best knowledge.

5.2 FLAKE BLENDS COMPOSITION

Three different blends 0%, 25% and 50% of innovation HDPE container (optionally 100% innovation), will be prepared as described in table 1.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 100% innovation (i.e. A.100, by replacing the test with A.25).

Table 1: Flake blends composition for the production of pellets

BLEND	COMPOSITION	% CONTROL	% INNOVATION
A.0	100% Control	100	0
A.25	75% Control 25% Innovation	75	25
A.50	50% Control 50% Innovation	50	50
OPTIONAL A.100	100% Innovation	0	100

5.3 PELLET PRODUCTION

Both control and innovation flakes can be mixed manually before extrusion for blends preparation. The flakes will be dried at the same conditions with a desiccant bed drying unit or with hot air and extruded at temperatures of 220 °C. The extrudate will be melt filtered (about 120 microns filtration). Control flake sample A.0 has to be extruded first. Further size reduction before extrusion is acceptable if needed to allow good feeding of the material into the extruder. See additional information in Table 2.

The extruder has to be cleaned before starting the extrusion process. This involves pulling the screws out of the barrel and then mechanically cleaning them with brass brushes until they reach a glossy finish. The barrel has to be also mechanically cleaned with round brass brushes from the mandrel to the run-out zone.

Table 2: Pellet production purpose & overview

FLAKE COMPOSITIONS	KG OF BLEND REQUIRED	PURPOSE OF BLEND
A.0 100% Control flake	Per lab requirement for a 30-minute run time	All tests compared to control values
A.25 75% control with 25% innovation	Per lab requirement for a 30-minute run time	Required for comparison to control values
A.50 50% control with 50% innovation	Per lab requirement for a 30-minute run time	Required for comparison to control values
OPTIONAL A.100 100% innovation	Per lab requirement for a 30-minute run time	Optional, to evaluate the impact of higher concentration of innovation on recycling.

Procedure:

- Dry samples A.0, A.25 and A.50 with a bed desiccant for 1 hour at 80 °C or with hot air at 90 °C for 1 hour.
- Extrude for first the sample A.0 (the control blend) at a temperature of 230 °C and with a 120 µm melt filter pack, for no less than 30 minutes.
- Monitor the extrusion process for heat stability.
- If the process doesn't reach steady state conditions (i.e. pressure and/or temperature increase), extrude for no less than 1 hour.
- Rapidly cool the extrudate in a water bath and fed into a pelletizer.
- The pelletizer speed has to be controlled to get a final pellet with a diameter of 3 mm.
- Monitor pressure build-up during pelletizing and report significant differences.
- Randomly collect the pellets to perform all the characterizations reported in Table 3.
- Change the melt filter pack between samples for visual examination.
- Be sure to produce enough pellets for all the tests, including the conversion tests.

Record properties' results in Table 3. The processing conditions used for all the samples must be identical. If some operating conditions have to be modified for A.25 and A.50 samples, this information must be documented in the report. A small amount of each sample (50 g) will be retained for RecyClass Technical Committee and the Applicant. The extruded pellets will be tested for pellet properties evaluation (Table 3). The pellets of the test samples will be compared with the pellets of the control sample. All pellets should meet the requirements reported in the Table 3.

If filterability is seen as a potential problem for the innovative samples, a dedicated filter test should be requested by the RecyClass PP Technical Committee.

5.3.1 FILTRATION TEST (OPTIONAL)

Filter contamination problems may occur when one of the components in the innovation sample is causing gels, larger particles, or releases degraded particles. Pressure drop has to be monitored during pelletizing since a pressure increase is an indication of the risk of filter contamination. If from previous step, the monitoring of pressure-drop and the visual inspection of the filter after the pelletization induce to further analyse contamination, a dedicated filtration test should be done. To limit the test duration, the innovation sample will not be mixed with control PP.

About 5 kg of pellets from the pure control PP and the pure innovation PP samples will be separately extruded for a minimum of 30 minutes and filtered using a 120 microns screen pack. The

100% control sample has to be extruded for first.

Procedure:

- Dry the control sample before to be extruded with a bed desiccant for 1 hour at 80 °C or with hot air hot air at 90 °C for 1 hours.
- Extrude the sample at a temperature of 230 °C and with a 120 µm melt filter pack, for no less than 30 minutes.
- If the process doesn't reach steady state conditions (i.e. pressure or temperature increase), extrude for no less than 1 hour.
- If required, small changes in the process parameters are admitted keeping the extrusion stable over the time but have to be recorded. However, continuous adjustments of the operating parameters during the runs to overcome steady-state conditions are not admitted.
- Monitor the pressure drop during the test and register variations.
- Repeat the procedure for the innovation sample with the identical operating parameters used for the control sample filtration.

The test is passed if the pressure before the filter does not double from the starting pressure during or at the end of the analysis.

5.3.2 PELLET PROPERTIES EVALUATION

Table 3: Pellet properties evaluation

ASSESSMENT	RESULT	STANDARD	BENCHMARK RECOMMENDATION
Bulk Density (kg/m ³)		Annex B of EN 15344	No less than 480 kg/m ³
Density (kg/m ³)		ISO 1183-1	A.25 and A.50 (and eventually A.100 lower than 0,920 g/cm ³ for natural containers and lower than 0,950 g/cm ³ for coloured containers)
Melt Index (g/10 min)		ISO 1133-1 (230 °C/2,16kg)	A.25 and A.50 (and eventually A.100 <15% respect to A.0)
Ash content (%)		ISO 3451-1 (muffle) or ISO 11358 (TGA)	A.50 lower than 1% (A.100 lower than 2%)
Filtration (µm)		Visual inspection	No build-up on screen
Moisture (% weight)		Moisture analyser	< 0,1 %
Differential Scanning Calorimetry (°C)		ISO 11357-3	Full thermogram (0 – 240 °C)
Impurities		Visual inspection	Record
Surface appearance		Visual inspection	Record
Volatiles (%)		10 g air-dried pellets exposed to 180°C for 10 minutes	±0,1% for A.25 and A.50 (and eventually A.100) respect to A.0
PE (%)		Differential Scanning Calorimetry or optionally Spectroscopic measurement via FTIR microscope in case of doubt	No more than 5% for A.25 and A.50 (and eventually A.100)
Delta Pressure (MPa)		Measure it after extruding through 120 microns for the stable 30 minutes run time	No more than 10% higher pressure respect to the control sample
Extrusion process		Unusual sticking, fumes, odour, and any build-up	Record

5.3.3 INJECTION MOULDING

Pellets A.0, A.25 and A.50 (optionally A.100) have to be tested for injection moulding to evaluate tensile properties, colours, as well as defects.

Control pellets A.0 have to be moulded first.

Procedure:

- Dry the samples A.0, A.25 and A.50 (optional: A.100) at 90 °C for 2 hours.
- Mould sample A.0 at 250-270 °C to multipurpose specimens' type 1A according to EN ISO 527-2 and to plates with measures of about 60 x 60 x 2 mm³.
- The specimens should be completely filled without any shrinkage, overspray, and inclusions.
- Samples A.25 and A.50 (optionally A.100) have to be moulded following the identical operating conditions of the control sample A.0.
- Tag the plates produced by A.0, A.25 and A.50 (optionally A.100) as D.0, D.25 and D.50 (optionally D.100), respectively.
- Small variations in operating conditions could be acceptable but have to be documented in the report.
- For each material monitor the heat stability and the injection pressure.

Record properties' results in Table 4. If some operating conditions have to be modified for A.25 and A.50 samples, this information must be documented in the report.

5.3.4 PROPERTIES EVALUATION

Table 4: Injected moulded parts properties evaluation

ASSESSMENT	RESULT	STANDARD	BENCHMARK RECOMMENDATION
Flexural Modulus		ISO 178	Minimum 800 N/mm ²
Tensile Strength at Yield		ISO 527	Minimum 18 N/mm ²
Tensile Stress at Break (MPa)		ISO 527-2	No more than -10% delta to control
Elongation at Break (%)		ISO 527-2	
Charpy impact test strength		ISO 179-2/1eA	± 10% than A.0
Charpy impact test energy		ISO 179-2/1eA	± 10% than A.0
Reflection Colour		(L*, b*, a*)	Record
Gloss		ASTM D2457	Record
Surface appearance		Visual inspection	No black specks
Inclusions of extraneous material		Visual inspection	Record

Mechanical data must be analysed on the 1A specimen.

Colour, inclusions and surface should be analysed on the plate.

6. CONVERSION

Based on the obtained results, the RecyClass PP Technical Committee will decide if the innovation presents some critical properties. On that basis, the Technical Committee reserves the right to further test the innovation. Otherwise, if the results are aligned with PP recycle specimens the Technical Committee and the Applicant will define the way to further test the innovation on the base of the main applications available on the market.

The Protocol aims to assess the highest value recycle application. The converting process should be same as production process of each innovation product, (1) blow moulding bottle, (2) extrusion sheet, (3) Injection moulding. For example, if innovation product is made by injection moulding, the converting test also should be done by injection moulding and not blow moulding, because PP resin for injection moulding is not suitable for extrusion blow moulding due to its high MFI. However, the RecyClass PP Technical Committee according with the Applicant could decide to test the innovation for a different application.

In case of bottles or sheets production, three blends of innovation and control pellets will be produced aiming to assess different innovation concentration in the recycling stream, as following reported. This step will be skipped in case of injection moulding. It means that the pellets will be tested as it is without any dilution with virgin material.

6.1 PELLET BLENDS PREPARATION

Once PP pellets have been produced and tested, three additional blends of at 50% virgin – 50% blend A shall be produced for converting tests. Keep separated the pellet samples previously produced and dry it for 10 minutes at 60°C. Then according to the values reported in following Table 5 prepare three different blends with 0% innovation (50% virgin and 50% A.0 pellets), 12,5% innovation (50% virgin and 50% A.25 pellets), and 25% innovation (50% virgin and 50% A.50 pellets), and tag them as samples B.0, B.25 and B.50 respectively.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 100% innovation (i.e. B.100, by replacing the test with B.25).

6.2 PELLET BLENDS COMPOSITION

Three different blends at 50% virgin pellet – 50% Blend A shall be produced as described in table 4. Blends will be composed of 0%, 12,5% and 25% content (end eventually 50%) by weight of the initial innovation PP container.

Table 5: Pellet blends composition for the application tests

BLEND	COMPOSITION	% VIRGIN RESIN	EFFECTIVE % CONTROL	EFFECTIVE % INNOVATION
B.0	50% Virgin Pellet 50% A.0	50	50	0
B.25	50% Virgin Pellet 50% A.25	50	37,5	12,5
B.50	50% Virgin Pellet 50% A.50	50	25	25
OPTIONAL B.100	50% Virgin Pellet 50% A.100	50	0	50

6.3 BOTTLES BLOW MOULDING

On the base of results obtained by pellet characterization, the RecyClass PP Technical Committee and the Applicant can optionally decide to test the innovation for bottles blow moulding.

Control blend B.0 has to be moulded first.

Table 6: Bottle production purpose & overview

PELLET COMPOSITIONS	KG OF BLEND REQUIRED	PURPOSE OF BLEND
B.0 50% A.0 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	All tests compared to control values
B.25 50% A.25 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Required for comparison to control values
B.50 50% A.50 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Required for comparison to control values
OPTIONAL B.100 50% A.100 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Optional, to evaluate the impact of higher concentration of innovation on recycling.

Procedure:

- The samples B.0, B.25 and B.50 (optionally B.100) should be blow moulded at 190-210 °C into one litre laundry detergent bottle (with handle), 1 mm tick.
- The cross section can be rectangular or square.
- The bottom corners should have radii as small as commercial laundry detergent bottles.
- Bottle height should be typically for one-litre laundry detergent bottles.
- Neck may be offset.
- The bottle must weigh 50 ± 2 grams.
- Samples B.25 and B.50 have to be blown following the identical operating conditions of the control sample B.0.
- Small variations in operating conditions could be acceptable but have to be documented in the report.

Record properties' results in Table 7. If some operating conditions have to be modified for B.25 and B.50 samples, this information must be documented in the report.

Replace B.25 with B.100 in the procedure if required by the TC.

6.3.1 BOTTLE PROPERTIES EVALUATION

Table 7: Bottle properties evaluation

ASSESSMENT	RESULTS	STANDARDS	BENCHMARK RECOMMENDATION
Bottle Appearance		Visual defects including surface roughness	Minimum of 10 bottles (compare with B.0)
Bottle Integrity		Visual inspection	Minimum of 10 bottles (compare with B.0)
Reflection Colours		(L*, b*, a*)	Record
Gloss		ASTM D2457	Record
Bottle Dimension		Height	±2% respect to B.0
Bottle Weight		Weight	±2% respect to B.0
Bottle Capacity		Brim-full	±2% respect to B.0
Thickness		Top, mid, and bottom side wall, shoulder, base corner	Minimum 0,3mm for each measure
Top load		ASTM D2659 (no ISO available)	<10% decrease respect to B.0
Drop impact		ASTM D2463, procedure B (no ISO available)	<10% decrease respect to B.0
Additional observation		Deposit on tooling	None observed respect to B.0 for 2 hours bottle production

6.3.2 TENSILE PROPERTIES TESTING

Tensile properties have to be tested for bottle application to minimize the influence of a subsequent processing and obtain a more realistic comparison.

Table 8: Bottle tensile properties evaluation

ASSESSMENT	RESULTS	STANDARDS	BENCHMARK RECOMMENDATION
Stress at Yield (MPa)		ISO 527-2	No more than -25% delta to control
Stress at Break (MPa)		ISO 527-2	
Elongation at Break (%)		ISO 527-2	
Elongation at Yield (%)		ISO 527-2	
Strength (MPa)		ISO 527-2	
Elongation at Strength (%)		ISO 527-2	

6.4 SHEET EXTRUSION

On the base of results obtained by pellet characterization, the RecyClass PP Technical Committee and the Applicant can optionally decide to test the innovation for sheet extrusion.

As reported in the section 6.1, prepare three different blends with 0% innovation (50% virgin and 50% A.0 pellets), 12.5% innovation (50% virgin and 50% A.25 pellets), and 25% innovation (50% virgin and 50% A.50 pellets). Tag them as C.0, C.25 and C.50, respectively.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 50% virgin and 50% innovation (i.e. C.100, by replacing the test with C.25).

Control pellet blend C.0 has to be extruded first. See more information in Table 9.

Table 9: Sheet production purpose & overview

PELLET COMPOSITIONS	KG OF BLEND REQUIRED	PURPOSE OF BLEND
C.0 50% A.0 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	All tests compared to control values
C.25 50% A.25 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Required for comparison to control values
C.50 50% A.50 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Required for comparison to control values
OPTIONAL C.100 50% A.100 pellet and 50% Virgin pellet	Per lab requirement for a 30-minute run time	Optional, to evaluate the impact of higher concentration of innovation on recycling.

Procedure:

- Dry samples C.0, C.25 and C.50 at 90°C for 2 hours.
- Extrude sheets at 220°C with thickness of 1000 µm under conditions determined for the control sample C.0.
- Extrusion run time per variable, no less than 30 minutes.
- Samples C.25 and C.50 have to be extruded following the identical operating conditions of the control sample C.0.
- Small variations in operating conditions could be acceptable but have to be documented in the report.

Record properties' results in Table 10. If some operating conditions have to be modified for C.25 and C.50 samples, this information must be documented in the report.

Replace C.25 with C.100 in the procedure if required by the TC.

6.4.1 SHEET PROPERTIES EVALUATION

Table 10: Sheet properties evaluation

ASSESSMENT	RESULTS	STANDARDS	BENCHMARK RECOMMENDATION
Tensile Modulus		ISO 527	± 10% to C.0
Tensile Strength at Yield		ISO 527	± 10% to C.0
Tensile Stress at Break (MPa)		ISO 527	No more than -10% delta to C.0
Elongation at break (%)		ISO 527-2	
Colour		Visual inspection	No discolouration
Surface Appearance		Visual inspection	No black specks
Inclusions of extraneous material		Visual inspection	Record
Colour		(L*, b*, a*)	Record
Gloss		ASTM D2457	Record

ANNEX I – CONTROL SAMPLES SELECTION

PP RESINS	APPLICATIONS	DENSITY, g/cm ³	MFI at 230° C / 2,16 kg, g/10min	FLEXURAL MODULUS, MPa	CHARPY IMPACT, KJ/m ²
RB206MO	Bottles (Food, cosmetics)	0,905	1,9	1100	7
BB125MO	Bottles (industrial chemicals)	0,905	1,3	1200	50
RB307MO	Containers (detergents, cleaners, chemicals, oil)	0,905	1,5	850	20
HC205TF	Thermoforming (trays, cap, container)	0,905	4	1700	5
BH345MO	Thin wall packaging	0,905	45	1300	6

RecyClass

c/o Plastic Recyclers Europe
Avenue de Broqueville 12
1150 Brussels – Belgium

Phone : +32 2 315 24 60
info@recyclclass.eu

www.recyclclass.eu