

RecyClass

RECYCLABILITY EVALUATION PROTOCOL

FOR PE FILMS

STANDARD LABORATORY PRACTICE

CONTENT

CONTENT	2
GLOSSARY	3
1. INTRODUCTION AND PURPOSE OF THE PROTOCOL	5
2. SCOPE OF THE PROTOCOL	6
3. DISCLAIMER	6
4. LABORATORY TEST METHODOLOGY	6
4.1 CONTROL SAMPLE SELECTION	8
4.2 VIRGIN SAMPLE SELECTION	8
5. LABORATORY TEST PROCEDURES	8
5.1 PRE-TREATMENT STEPS	8
5.1.1 GRINDING	8
5.1.2 WASHING	9
5.1.3 FLOTATION TEST	9
5.1.4 DRYING	10
5.2 EXTRUSION	12
5.2.1 FLAKE BLENDS PREPARATION	12
5.2.2 FLAKE BLENDS COMPOSITION	12
5.2.3 PELLET PRODUCTION	13
5.3 CONVERSION	15
5.3.1 PELLET BLENDS PREPARATION	15
5.3.2 PELLET BLENDS COMPOSITION	15
5.3.3 BLOWN FILM PRODUCTION	16
DOCUMENT VERSION HISTORY	18
ANNEX I – CONTROL & VIRGIN SAMPLES SELECTION	19
ANNEX II – CONTROL & VIRGIN SAMPLES SELECTION	19
ANNEX III – PE FILM SURFACE IMPRESSION EVALUATION AND IMPURITY VISUAL INSPECTION	20

GLOSSARY

A.0	100% control film flakes
A.25	Blend 75/25 control/innovation flakes
A.50	Blend 50/50 control/innovation flakes
A.100	Blend 100% innovation film flakes
ASTM	American Society for Testing and Materials
B.0	Film made of 50% of virgin pellets and 50% of B.0 pellets
B.25	Film made of 50% of virgin pellets and 50% of B.25 pellets
B.50	Film made of 50% of virgin pellets and 50% of B.50 pellets
B.100	Film made of 50% of virgin pellets and 50% of B.100 pellets
Control Sample	Plain PE film (or PE resin that has already been thermally processed once) used as benchmark
EN	European Standard
Innovation Sample	Film containing the innovative technology
ISO	International Organization for Standardization
MFI	Melt Flow Index
PE	Polyethylene
PP	Polypropylene
PVC	Polyvinyl Chloride
TC	Technical Committee
TGA	Thermo Gravimetric Analysis
Virgin Material	PE resin that will for the first time be converted to a plastic product (no thermal pre-treatment)
wt%	Weight Percentage

RecyClass

DISCLAIMER

“RecyClass is an initiative aiming at enhancing and evaluating the recyclability of plastic packaging through a technical perspective. The Recyclability Evaluation Protocols will promote recyclability by encouraging industry to test new plastic technologies, materials or product before market launch and giving advice and recommendations to the companies.

The Recyclability Evaluation Protocols are available for download in the RecyClass website. Companies providing plastic packaging concepts are encouraged to use them to self-assess the impact of their solutions on recyclability and highlight potential issues. **However, compliance to a Recyclability Evaluation Protocol is not a replacement for an official assessment and may not be used as a marketing tool.** The RecyClass Steering Board, following the recommendations of the Technical Committees, is the decision-maker about the compatibility of the innovation with recycling according to the results of the evaluation, granting a technology or product approval letter to the Applicant.

All tests must follow the Evaluation Protocols recommended by the RecyClass Technical Committees and must be conducted by an independent laboratory recognised by RecyClass which has no legal affiliation to the applicant.

More information is reported in the RecyClass Internal Procedures available in the [RecyClass website](#).”

1. INTRODUCTION AND PURPOSE OF THE PROTOCOL

The “RecyClass¹ Recyclability Evaluation Protocol for PE Films” referred to in this document as “The Protocol” describes the methodology that must be followed by the applicant at a laboratory scale in order to determine if a plastic packaging innovation is compatible with the post-consumer PE film recycling stream. The Protocol targets companies responsible for introducing a packaging product into the market. The applicant shall proceed with the Protocol as established in the Assessment Process for Applicants of Recyclability Evaluation in the RecyClass Internal Procedures² and “RecyClass Technology & Product Approval Quality Management & Procedures document”³

The Protocol analyses whether an innovation will undergo the necessary pre-treatment, extrusion and conversion steps described in this methodology at a laboratory scale without negatively impacting the recycling process. It aims to guarantee recyclability⁴ of plastics packaging while encouraging innovation in the PE film market. The overall goal is to maintain the protection of packaged goods and their marketing display functions without obstructing the proper functioning of the PE film recycling process.

This document provides guidance on the tests methodology that shall be followed, including benchmark recommendations to guide the interpretation of the results.

PE film terminology, as it is used in this document, is defined as a flexible plastic whose form changes depending on whether it is filled with a substance or not. It has a thickness of up to 250 µm and at least 90% of its weight is plastic, with up to 10% of closely bonded or impregnated material. Printing, coatings, or plastic fillers can classify as closely bonded or impregnated materials.

1 RecyClass assesses the recyclability of a plastic package providing a ranking from A to F. RecyClass also provides specific indications and recommendations on how to improve packaging design to fit current recycling technologies. More information at <https://recyclclass.eu/>

² [RecyClass Internal Procedures](#)

³ [RecyClass Technology & Product Approval Quality Management & Procedures](#)

4 Recyclability definition according to PRE & APR: Plastics must meet four conditions for a product to be considered recyclable: 1. The product must be made with a plastic that is collected for recycling, has market value and/or is supported by a legislatively mandated program. 2. The product must be sorted and aggregated into defined streams for recycling processes. 3. The product can be processed and reclaimed/recycled with commercial recycling processes. 4. The recycled plastic becomes a raw material that is used in the production of new products.

2. SCOPE OF THE PROTOCOL

The scope of the Protocol covers any innovation introduced to the existing packaging solutions for PE films. Prior to initiating the evaluation, the applicant shall review the Design for Recycling Guidelines for clear or coloured PE films¹ in order to confirm that the PE innovation film is compatible with these requirements.

The following packaging solutions and/or innovations are covered by the scope of this Protocol:

1. Non-PE layers and coatings, including PP, nylon, EVOH, and others not specified.
2. Rigid PE and non-PE attachments to the PE film tested packaging.
3. Mineral fillers and other additives that alter the density of the PE film.
4. Paper and filmic labels
5. Inks and pigments, including direct, reverse, laminated, and other printing technologies.
6. Compatibilizers and other additives otherwise not specified.
7. Adhesives in laminated mono-PE-structures

Following RecyClass recyclability methodology², packaging containing aluminium, metal, degradable plastics, black carbon surface, as well as PVC, PVDC and PET layers are considered disqualified for PE films recyclability. By consequence, packaging containing one of these features do not fall under the scope of this Protocol.

3. DISCLAIMER

The Protocol is created to represent as accurately as possible how the actual PE recycling works at an industrial scale. RecyClass Technical Committee reserves the right for further testing if necessary, to issue a final opinion on the recyclability of the tested packaging. Note that, the Recyclability Evaluation Protocol establish some benchmark recommendations to guide the decision-making process. However, not all the properties listed in the protocol are provided with a benchmark recommendation, being the evaluation also based on the technical expertise of the Technical Committee.

Furthermore, within RecyClass, “easy-to-empty” and “easy-to-access” indexes are important factors when considering the recyclability of a package. Washing operation at a recycling facility uses mild conditions, no detergents nor strong chemicals. Consequently, any food or product residue constitutes an impurity for the recycling stream. RecyClass encourages testing to verify that the package is “easy-to-empty” and therefore ensures the minimum amount of leftover material at the end of its useful life. Nonetheless, this factor is beyond the scope of this Protocol.

4. LABORATORY TEST METHODOLOGY

This methodology aims to reproduce the recycling process at laboratory scale to determine the suitability of an innovation for the PE film recycling stream. The methodology described below shall be followed precisely and any modifications or problems must be noted during the testing phase. A Laboratory Evaluation Report compiling objectively all the results obtained shall be prepared to report to the RecyClass PO films Technical Committee which

¹ [Design for Recycling Guidelines](#)


² [RecyClass Methodology](#)

RecyClass

will interpret the final results. Any remarks during the laboratory tests described in the Protocol shall be also noted down.

See below in Figure 1 a diagram where the flow of the methodology is described.

Figure 1: Methodology Diagram

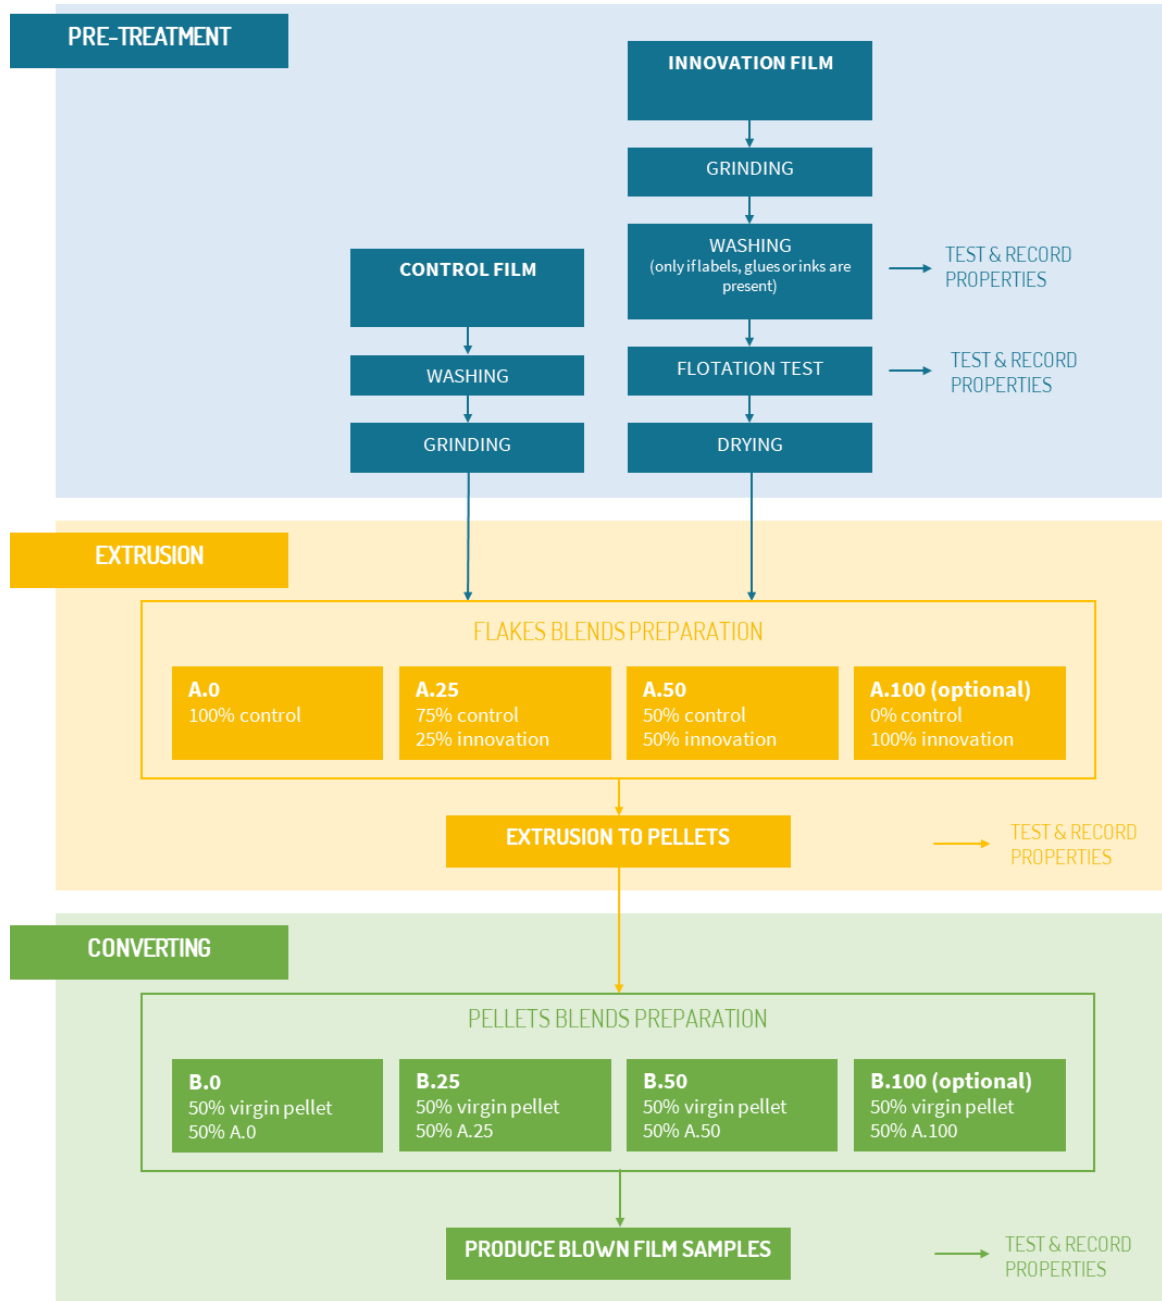

4.1 CONTROL SAMPLE SELECTION

The control sample for use following the Protocol can be selected by:

- **Option 1:** If there is a PE film known to be recyclable, consisting of the same base PE resin as the Innovation, except/apart from the specific ingredient/feature being evaluated, it can be selected as the control for this Protocol, with the approval of the RecyClass PO films TC.

- **Option 2:** The applicant can select a PE resin listed in the Annex (or another grade with similar MFI and density from alternative suppliers) to be used as control for this Protocol, with/upon the approval of the PO films RecyClass Technical Committee. To obtain the control, the selected PE resin must be extruded once, following the recommendations for extrusion present in this protocol, in order to simulate the same thermal history that an actual packaging may have. The same physical form as the innovative material should be preferred.

These options are to be used to make both the control flakes and the blends with innovation flakes that will contain the innovative feature(s) (barrier, adhesive, additive, coating, label, multilayer resin, etc) for the recyclability study.

Since control material is used as reference to evaluate the impact of the innovation, A.0 and B.0 (see Figure 1) needs to fulfil some minimum requirements to make the Recyclability Evaluation valid. RecyClass recognised testing facilities are aware of these minimum requirements and will inform both the Applicant and RecyClass in case of deviations.

For the purpose of the tests the amount of material that the Applicant should provide will depend upon the equipment and scale used in each laboratory. Usually, at least 10 kg of innovation material (as packaging) and 25 kg of control material (as packaging) will be requested to prepare blends of at least 5 kg each. More innovation sample could be requested in case optional tests are required by the RecyClass PO films Technical Committee. It is worth pointing out that the protocol should be used to test innovations as specific parts of a packaging, meaning that all the decorations or elements of the packaging do not need to be present. The objective is to discriminate the impact of a specific innovation on the recyclability of PE films. Note that full packaging (with labels, decoration, closures, ...) can also be assessed according to the present protocol.

4.2 VIRGIN SAMPLE SELECTION

The virgin PE sample to be used in this Protocol can be selected from the PE resins listed in the Annex and used as it is (i.e. without applying any thermal pre-treatment).

5. LABORATORY TEST PROCEDURES

5.1 PRE-TREATMENT STEPS

5.1.1 GRINDING

Control (if provided as film) and innovation samples are separately ground in order to fit the throat of a standard laboratory extruder. In case the control is submitted under the shape of pellets, only the innovation sample has to be ground.

Procedure:

- Report the mass of each sample before grinding as m_0 .
- Grind separately control and innovation sample to flakes of 10 to 20 mm.
- Store in separate containers.
- Report the mass of each sample after grinding as m_1 .

5.1.2 WASHING

Control and innovation samples are washed to test the impact on wet washing operations. Washing shall only be performed if paper, labels, adhesives, coatings or surface printing is present in the innovation film. If none of those are present, go directly to step 5.1.3.

The following procedures have to be utilized for both control and innovation samples separately.

Procedure:

- Prepare the wash container at a 1:24 ratio (1 g flakes vs 24 ml water) with tap water at a room temperature (+/- 20 – 25°C). No added detergents or caustic soda.
- Wash each sample separately at a 1:24 ratio (1 g flakes vs 24 ml water) at 1.000 rpm for 10 minutes.
- Rinse each sample at the same ratio with 500 rpm for 5 minutes.
- Report the mass of each sample after washing as m_2 .
- Take photos at each step.

Save the washing and rinsing water separately for visual observation. Record the presence of suspended particles or fibers within the water as well as any water coloration. Check and record if the glue has been diluted after the rinsing or it remains attached to film flakes.

5.1.3 FLOTATION TEST

The flotation test will determine if the flakes can be separated by density in the float/sink tank used in the recycling operation.

The following procedure has to be utilized for innovation samples only.

Procedure:

- Pour the washed flakes in a tank filled with water at a 1:24 ratio at a room temperature.
- Stir at 500 rpm for 10 minutes.
- Stop the stirrer and allow the water to rest for 2 minutes.
- Remove the tank from the magnetic stirrer.
- Collect all particles that float on the surface with a sieve.
- Collect separately the particles that sink.
- Report the mass of innovation sample after sink-float separation as m_{3f} and m_{3s} for floating and sinking fraction respectively.

The efficiency of the sink/float separation should be measured using 50 g of washed flakes of innovative samples and a graduated beaker filled with tap water, as described by the following procedure.

Procedure:

- Fill a 1 l graduated beaker with 700 ml of tap water (pH between 7 and 8).
- Boil the water for 10 minutes, and then cool at room temperature.
- Transfer 300 ml of water in a graduated beaker.
- Put the innovative sample in the water and stir at 500 rpm for 2 minutes.
- Stop the magnetic stirrer and allow the water to rest for 2 minutes.
- Take photo of the beaker.
- Remove all particles that float at the surface with a sieve.
- Take photos of the floating and sinking fractions separately.
- Save the wash water for visual evaluation.
- Dry the floating fraction for 1 hours at 80 °C in a bed desiccant or 3 hours at 65 °C with air.
- Cool to room temperature, weigh and record the weight of the float fraction.
- Calculate the test efficiency as:

$$\eta = \frac{W_F}{W_I} = \frac{(W_1 - W_S)}{W_I} \times 100 \text{ [%]}$$

Where:

η : Test efficiency

WF : weight of floating fraction

WS : weight of sinking fraction

WI : weight of innovative sample

5.1.4 DRYING

Reduce the flake moisture according to the following procedure. A minimum of 2 kg of material are necessary to proceed with the moisture content determination.

Procedure:

- Heat the oven to 60°C.
- Divide the flakes evenly between the 4 dishes. The dishes are sequentially numbered.
- Weigh the different dishes with the control or innovation flakes before introducing them in the oven.
- As soon as the oven has reached 60°C, the flakes are added to the oven for 24 hours.
- Weight the material after 6 hours in the oven. Weight the material at the end, after 24 hours in the oven.
- Report the mass of each sample after washing as m4.
- Record the moisture content.

RecyClass

According to the mass measured at the different steps of the pre-treatment, fill the table in Annex 2 and determine the pre-treatment yield for both control and innovation as following:

$$\eta_{PT} = \frac{m_4}{m_0}$$

Where:

η : Pre-treatment yield

m_0 : mass of sample before grinding

m_4 : mass of sample after drying

5.2 EXTRUSION

5.2.1 FLAKE BLENDS PREPARATION

For each sample obtained, to evaluate and record the properties of innovation PE films against control as laid out in this Protocol, a set of flake blends is prepared as described in Table 1. Blends shall be produced once the control and innovation films have separately gone through all pre-treatment steps described above.

Keep separated the control and innovation flakes obtained following the previous steps, and air dry for 24 h at ambient air. Then, according to the values reported in Table 1 prepare three different blends with 100% control (and 0% innovation), 75% control - 25% innovation, and 50% control - 50% innovation, and tag them respectively as A.0, A.25 and A.50.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 100% innovation (i.e. A.100, by replacing the test with A.25).

For the purpose of the tests, the Applicant should provide enough innovation and control materials which allows for the blend preparations (cf. section 4.1.).

5.2.2 FLAKE BLENDS COMPOSITION

Three different blends 0%, 25% and 50% of innovation film (optionally 100% innovation film), will be prepared as described in table 1.

Eventually, depending on the application, the TC can ask the Applicant also to perform the tests with a sample of 100% innovation (i.e. A.100, by replacing the test with A.25).

Table 1: Flake blends composition for the production of pellets

BLEND	COMPOSITION	% CONTROL FILM	% INNOVATION FILM
A.0	100% Control film	100	0
A.25	75% Control film 25% Innovation film	75	25
A.50	50% Control film 50% Innovation film	50	50
OPTIONAL A.100	100% Innovation film	0	100

5.2.3 PELLET PRODUCTION

Both control and innovation flakes can be mixed manually before extrusion for blends preparation. The flakes will be dried at the same conditions with a desiccant bed drying unit or with hot air and extruded using a co-rotative twin-screw extruder at a melt temperature of 230 °C. The extrudate will be melt filtered with a 110 microns filter. When needed, for low bulk density materials, a densification step can be used prior extrusion to effectively feed the extruder, under the agreement of the RecyClass PO Films Technical Committee.

Control flake sample A.0 has to be extruded first. Further size reduction before extrusion is acceptable if needed to allow good feeding of the material into the extruder. Nevertheless, the flake size should be kept constant between all samples. See additional information in Table 2.

The extruder has to be cleaned before starting the extrusion process. This involves pulling the screws out of the barrel and then mechanically cleaning them with brass brushes until they reach a glossy finish. The barrel has to be also mechanically cleaned with round brass brushes from the mandrel to the run-out zone.

Table 2: Pellet production purpose & overview

FLAKE COMPOSITIONS	KG OF BLEND REQUIRED	PURPOSE OF BLEND
A.0 100% Control flake	Per laboratory requirement for a 30-minute run time	All tests compared to control values
A.25 75% control with 25% innovation	Per laboratory requirement for a 30-minute run time	Required for comparison to control values
A.50 50% control with 50% innovation	Per laboratory requirement for a 30-minute run time	Required for comparison to control values
OPTIONAL A.100 100% innovation	Per laboratory requirement for a 30-minute run time	Optional, to evaluate the impact of higher concentration of innovation on recycling.

Procedure:

- If a densification step was performed, report the equipment used, as well as condition and procedures followed.
- Dry samples A.0, A.25 and A.50 (optionally A.100) with a bed desiccant for 1 hours at 90 °C or with hot air at 90 °C for 1 hours.
- Extrude at a melt temperature of 230 ± 5 °C with a suggested filtration screen of 110 µm. If the range is not optimal, record temperature and state reasons for alteration. Melt residence time should be less than 6 minutes.
- Recommended throughput is between 5 and 10 kg/h and rotation speed between 100 and 200 rpm.
- Extrusion run time per variable, no less than 30 minutes.
- Extrusion load > 60%
- Maintain pressure increase to less than 25% from the control over a stable 15 minutes run time.

Record properties' results in Table 3. The processing conditions used for all the samples must be identical. If some operating conditions have to be modified for A.25 and A.50 (optionally A.100) samples, this information must be documented in the report. A small amount of each sample (50 g) will be retained for RecyClass PO films Technical Committee and the Applicant. The extruded pellets will be tested for pellet properties evaluation (Table 3). The pellets

of the test samples will be compared with the pellets of the control sample. All pellets should meet the requirements reported in the Table 3.

5.2.3.1 PELLETT PROPERTIES EVALUATION

Table 3: Pellet properties evaluation

ASSESSMENT	RESULT	STANDARD	BENCHMARK RECOMMENDATION
Bulk Density (kg/m ³)		Annex B of EN 15344	Superior to 500 kg/m ³
Density (kg/m ³)		ISO 1183-1	A.25 and A.50 (and eventually A.100) lower than 0,940 g/cm ³ for natural films and lower than 0,970 g/cm ³ for coloured films
Melt Index (g/10 min)		ISO 1133 (190 °C/2,16kg)	< 0,75 g/10min delta to the control
Ash content (wt%)		ISO 3451-1 (muffle)	A.50 lower than 1wt% (A.100 lower than 2wt%)
Filtration (110 µm)		Visual inspection	No build-up on screen
Pellets size (average)		EN 15344:2008	Record
Pellets distribution (min – max)		EN 15344:2008	Record
Gas content (wt%)		Weight loss at 120°C	Record
Moisture content (wt%)		Moisture Analyzer	<0,1 wt%
Melt Temperature (°C)		ISO 11357-3:2018 (Heat-cool-heat cycle at 10°/min from 0°C to 250°C with 1 minutes of isotherm between each ramp)	Melt Temperature second heating < 150 °C
Impurities (unmelted particles)		Visual inspection	Record
Surface appearance		Visual inspection	Record
Volatiles (wt%)		10g air-dried pellets exposed to 160°C for 10 minutes	< 1,0% weight loss
PP (%)		Differential Scanning Calorimetry or Spectroscopic measurement via FTIR	No more than 2,5% for A.50 (and eventually no more than 5% for A.100)
Reflection Colour		(L*, a*, b*) + ΔE	For natural stream: Δb* < 5

Average Pressure (MPa)		Average pressure after extruding through 110 microns filter for the stable 15 minutes run time, compared to 100% control	No more than a 25% delta increase to A.0
Pressure Variation (MPa)		($\Delta P_{25-30\text{minutes}} - \Delta P_{5\text{ first minutes}}$)	No increase higher than 25% compared to start
Extrusion process		Unusual sticking, fumes, odour, and any build-up	Record

5.3 CONVERSION

Prior the recyclability assessment, the RecyClass PO Films Technical Committee will decide the process to be used for conversion according to the highest value recycle application for the innovation. In the present case, all innovative PE Films recycle will be converted via blown film extrusion. For blown films production, three blends of innovation and control pellets will be produced aiming to assess different innovation concentration in the recycling stream, as reported in the following paragraph.

5.3.1 PELLET BLENDS PREPARATION

Once PE pellets have been produced and tested, three additional blends of 50% virgin – 50% blend “A.X” (X being 0, 25,50 or 100) shall be produced for converting tests. Keep separated the pellet samples previously produced and dry them for 10 minutes at 60°C. Then according to the values reported in following Table 4 prepare three different blends with 0% innovation (50% virgin and 50% A.0 pellets), 12,5% innovation (50% virgin and 50% A.25 pellets), and 25% innovation (50% virgin and 50% A.50 pellets), and tag them as samples B.0, B.25 and B.50 respectively.

Eventually, depending on the application and its market penetration, the TC can ask the Applicant also to perform the tests with a sample of 50% virgin and 50% innovation (i.e. B.100, by replacing the test with B.25).

For the purpose of the tests the Applicant should provide enough virgin materials which allows for the blend preparations. The laboratory carrying out the Protocol testing can define the amounts according to their best knowledge.

5.3.2 PELLET BLENDS COMPOSITION

Three different blends of blown film at 50% virgin pellet – 50% Blend A shall be produced as described in table 4. Blends will be composed of 0%, 12,5% and 25% content (end eventually 50%) of the initial innovation film.

Table 4: Pellet blends composition for the application tests

BLEND	COMPOSITION	% VIRGIN RESIN	EFFECTIVE % CONTROL FILM	EFFECTIVE % INNOVATION FILM
B.0	50% Virgin Pellet 50% A.0	50	50	0
B.25	50% Virgin Pellet 50% A.25	50	37,5	12,5
B.50	50% Virgin Pellet 50% A.50	50	25	25
OPTIONAL B.100	50% Virgin Pellet 50% A.100	50	0	50

5.3.3 BLOWN FILM PRODUCTION

Prepare blends for blown film extrusion as described in table 5.

Table 5: Blown film production purpose & overview

PELLET COMPOSITIONS	KG OF BLEND REQUIRED	PURPOSE OF BLEND
B.0 50% A.0 pellet and 50% Virgin pellet	Per laboratory requirement for a 30-minute run time	All tests compared to control values
B.25 50% A.25 pellet and 50% Virgin pellet	Per laboratory requirement for a 30-minute run time	Required for comparison to control values
B.50 50% A.50 pellet and 50% Virgin pellet	Per laboratory requirement for a 30-minute run time	Required for comparison to control values
OPTIONAL B.100 50% A.100 pellet and 50% Virgin pellet	Per laboratory requirement for a 30-minute run time	Optional, to evaluate the impact of higher concentration of innovation on recycling.

Procedure:

- Produce blown film with a fixed blow-up ratio $\approx 2,5$, at a melt temperature of 200 – 230°C and a thickness $< 25 \mu\text{m}$.
- Report the melt temperature during the 30-min run time.
- Record production properties in table 6, including information regarding structure, holes, and stability of the blown film.
- For “Gels & Specks” evaluation, refer to the Annex 3 “PE Film Surface Impression Evaluation and Impurity Visual Inspection”.
- Report the morphology of the gels by performing microscopy or any other optical measurement allowing it.

5.3.3.1 BLOWN FILM PROPERTIES EVALUATION

Table 6: Blown film properties evaluation*

ASSESSMENT	RESULTS	STANDARDS	BENCHMARK RECOMMENDATIONS		
Thickness (µm)		ISO 4593; DIN 53370	25 µm		
Tear Strength (TD**) (N)		DIN EN ISO 6383-2; DIN EN ISO 1974		-	
Tear Strength (MD***) (N)				-	
Tensile Stress at Yield (TD) (MPa) (if observed)		DIN EN ISO 527-3 (Type 2 samples, strain-rate close to 100 min ⁻¹)		-	
Tensile Stress at Yield (MD) (MPa) (if observed)				-	
Elongation at Yield (TD) (%)				-	
Elongation at Yield (MD) (%)				-	
Tensile Stress at Break (TD) (MPa)				> 10 MPa	
Tensile Stress at Break (MD) (MPa)				> 10 MPa	
Elongation at Break (TD) (%)				> 400%	
Elongation at Break (MD) (%)				> 250%	
Dart Impact (g)			ISO 7765		> 50 g
Puncture Resistance (N)			DIN EN 14477		-
Haze (%)		DIN EN ISO 14782	Record. Increase of haze will lower the visual aspects		
Gels and Specks (Annex 3)		5 samples of 100 cm ² for a gel and specks count greater than 200 µm seen by the naked eye at 30 cm from sample. The number will be recorded but no standard required.	Record the amount and aspect. All gels & specs will weaken the film quality	< 100 Gels & Specks	
Surface Appearance			Record. Limit the end use application.		

*Film testing results are minimum conditions. Historical data over time may require adjustments for specification change and requirements for specific applications.

**TD: transverse direction

***MD: machine direction

DOCUMENT VERSION HISTORY

VERSION	PUBLICATION DATE	REVISION NOTES
1.0	September 2018	Recyclability Evaluation Protocol for PE Films release
2.0	May 2021	Major modifications about procedure, wording & template
3.0	January 2022	Revised wording and removal of some testing, addition of new control materials
3.1	August 2022	Mandatory washing and floatation step for control sample removed Wording for sample quantity requested for testing Temperature recommendations for extrusion are now melt temperatures
4.0	January 2023	Addition minimum requirements for control material Addition pre-treatment yield and Annex 2 Addition of densification step prior extrusion, and addition of extrusion procedures Removal of TGA analysis for ash content Addition of benchmark recommendation for colour measurement Addition of fixed benchmark recommendations for tensile testing and dart impact Modification of the gels & specks evaluation with addition of Annex 3

ANNEX I – CONTROL & VIRGIN SAMPLES SELECTION

TYPE OF RESIN	LDPE & LLDPE RESINS*	DENSITY, g/cm ³	MFI at 190° C / 2,16 kg, g/10min
LDPE	BOREALIS FT5230	0,923	0,75
LDPE	DOW 310E	0,923	0,75
LDPE	ENI Versalis Riblene FF33	0,923	0,80
LDPE	ExxonMobil LD150BW	0,923	0,75
LDPE	LyondellBasell Lupolen 2420F	0,923	0,75
LLDPE	Dowlex 2045G	0.920	1.0
LLDPE	Dowlex 2740G	0.940	1.0
LLDPE	Dowlex 2750ST	0.950	1.5
LLDPE	Dowlex 2107GC	0.917	2.3

*Other LDPE or LLDPE grades with similar MFI and density from alternative suppliers can also be accepted.

ANNEX II – CONTROL & VIRGIN SAMPLES SELECTION

MASS (g)	CONTROL SAMPLE	INNOVATION SAMPLE
Before grinding: m ₀		
After grinding: m ₁		
After washing: m ₂		
Floating fraction after sink-float separation: m _{3f}		
Sinking fraction after sink-float separation: m _{3s}		
After drying: m ₄		
Pre-treatment yield: η _{PT}		

ANNEX III – PE FILM SURFACE IMPRESSION EVALUATION AND IMPURITY VISUAL INSPECTION

PE Film Surface Impression Evaluation and Impurity Visual Inspection

Defect description	Rating			
	Very Smooth	Smooth	Rough	Very rough
Texture				
Gels larger than 0.2 mm	: Defined as visually uniform small clumps of crosslinked polymers			
	<50	50-100	>100	for 500 cm ²
Carbon black particles/Specks	: Defined as very small contaminants, possibly darker in colour			
	<10	10-15	>15	for 500 cm ²
Fisheyes	: Defined as small round or oblong shapes with darker/more concentrated centre			
	≤3	4-6	>6	for 500 cm ²
Holes	: Defined as tears in the blown film bubble starting at, or caused by, gels, specks or fisheyes			
	0	1 or more		

Preferred range	Limited	Non-acceptable
-----------------	---------	----------------

For evaluation procedures, RecyClass recommends following the Appendix A “Evaluation of Blown Film Appearance Rating Calculation Totals for Control and Test” present in the APR PE Film critical guidance FPE-CG-01¹

Defect description	B.0	B.25	B.50	B.100
Texture				
Gels larger than 0.2 mm				
Carbon black particles/specks				
Fisheyes				
Holes				

Report here the exact amount of defects observed, as well as standard deviations.

¹ APR PE Film critical guidance FPE-CG-01

RecyClass

c/o Plastic Recyclers Europe
Avenue de Broqueville 12
1150 Brussels – Belgium

Phone : +32 2 786 39 08
info@recyclclass.eu

www.recyclclass.eu