

RecyClass

SORTING EVALUATION PROTOCOL

FOR PLASTIC PACKAGING

STANDARD TESTING PRACTICE SEP-01

CONTENT

CONTENT	2
GLOSSARY	4
1. INTRODUCTION AND PURPOSE OF THE PROTOCOL	5
2. SCOPE OF THE PROTOCOL	5
3. DISCLAIMER	6
4. TESTING METHODOLOGY	6
4.1 Sample Selection	8
4.2 Sample Preparation Procedure	8
4.2.1 General Sample preparation	9
4.2.2 Innovative packaging provided with cellulose-based components	10
4.3 Check Dimensions	10
4.3.1 Sieve Drum Test	10
4.4 The Wind Sifter	11
4.5 The Magnet	11
4.6 NIR-Beverage carton	12
4.7 Eddy Current	12
4.8 Ballistic Separation	13
4.9 NIR Static Test	13
4.10 NIR	13
4.10.1 NIR PET	14
4.10.2 NIR PET-Bottles or PET-Thermoforms	14
4.10.3 NIR PE	14
4.10.4 NIR PP	15
4.10.5 NIR PS	15
4.10.6 NIR Mixed Plastics	16
4.11 Colour module	16
4.11.1 Lab* coordinates	17
4.11.2 Colour sorting – PET bottles	18
4.12 Report Content	19
4.13 Results Interpretation	20
ANNEX I	22
ANNEX II	23

RecyClass

DOCUMENT VERSION HISTORY 24

GLOSSARY

PET	Polyethylene Terephthalate
PE	Polyethylene
LDPE	Low Density Polyethylene
HDPE	High Density Polyethylene
PP	Polypropylene
PS	Polystyrene
NIR	Near-Infrared

DISCLAIMER

RecyClass is a non-profit, cross-industry initiative advancing recyclability, bringing transparency to the origin of plastic waste and establishing a harmonised approach toward recycled plastic calculation & traceability in Europe. The Sorting Evaluation Protocol promote recyclability by encouraging the industry to test new plastic technologies, materials or products, providing recommendations on improving their recyclability before market launch.

The Sorting Evaluation Protocol is freely available to download on the [RecyClass website](#). Companies developing new plastic concepts are encouraged to use them to self-assess the impact of their solutions on sorting and highlight potential issues. However, compliance with the Sorting Evaluation Protocol is not a replacement for an official assessment and may not be used as a marketing tool.

All tests must follow the Evaluation Protocols recommended by the RecyClass Technical Committees and be conducted by an independent laboratory recognised by RecyClass, which has no legal affiliation to the applicant.

More information is reported in the RecyClass Internal Procedures, available on the [RecyClass website](#).

1. INTRODUCTION AND PURPOSE OF THE PROTOCOL

The “Sorting Evaluation Protocol” referred to in this document as “The Protocol” describes the methodology that may be followed by the Applicant at pilot or industrial scale to determine the sorting behaviour and the recycling stream of the tested packaging.

The Protocol evaluates the sorting behaviour of plastic packaging, considering the following waste streams:

- PE flexibles,
- PP flexibles,
- Mixed plastics flexibles,
- PET bottles (transparent clear/light blue vs transparent coloured)
- PET thermoforms (transparent, clear)
- PP rigids,
- HDPE rigids,
- PS rigids,
- Mixed plastics rigids.

The Protocol also considers the design issues that can misdirect the plastic packaging to the streams of ferrous metals, non-ferrous metals, drinking carboard, or residues.

This document provides guidance on the testing methodology that shall be followed, including benchmark recommendations to guide the interpretation of the results.

2. SCOPE OF THE PROTOCOL

The scope of the Protocol covers any plastic packaging mainly made of PE, PP, PET or PS. Prior to initiating the evaluation, the Applicant is invited to review the RecyClass Design for Recycling Guidelines¹, Online Tool² and the Recyclability Methodology³ in order to verify that the packaging design will not mislead the sorting results.

This protocol covers consumer plastic packaging formats, including but not limited to:

1. Flexible films
2. Pouches
3. Bags
4. Bottles
5. Containers
6. Tubes
7. Pots
8. Cups
9. Thermoforms
10. Foam and expanded foam packaging

¹ Design for Recycling Guidelines available [here](#)

² RecyClass Online Tool available [here](#)

³ Recyclability Methodology of RecyClass available [here](#)

RecyClass

The Protocol provides guidance on the sorting parameters to apply to determine the recycling stream of the plastic packaging. Packaging containing predominantly different material than plastic or made of different plastic polymers than the ones listed above shall not refer to this Protocol and shall be separately considered to assess their sorting behaviour.

3. DISCLAIMER

The Protocol is created to represent as accurately as possible how the current European sorting facilities work at an industrial scale. The RecyClass Technical Committees reserve the right to further testing if necessary, and the RecyClass Sorting Task Force may update the Protocol following new sorting practices.

State of the art European sorting facilities are operating with the following steps:

- Sieve drum,
- Wind sifter,
- Magnet,
- Eddy current,
- Ballistic separation,
- NIR/VIS detections.

Consequently, any other sorting innovation (tracers, digital marks, AI) is not considered in the Protocol and will not be considered until widely used at a commercial scale.

4. TESTING METHODOLOGY

This methodology aims to reproduce the setting of state-of-the-art European sorting facilities by following the same steps and applying similar parameters. The methodology described below shall be followed precisely, and any modifications or problems must be noted during the testing phase.

Line settings

The settings of the line for the trials must be representative of a European MRF (Materials Recovery Facility) sorting line. Any deviation from the standard operational settings will have to be reported in the results.

A Sorting Evaluation Report compiling all the results obtained shall be prepared by the testing facility to record the results. Any remarks observed during the testing must be noted in this Report.

See below in Figure 1 a diagram where the flow of the methodology is described.

RecyClass

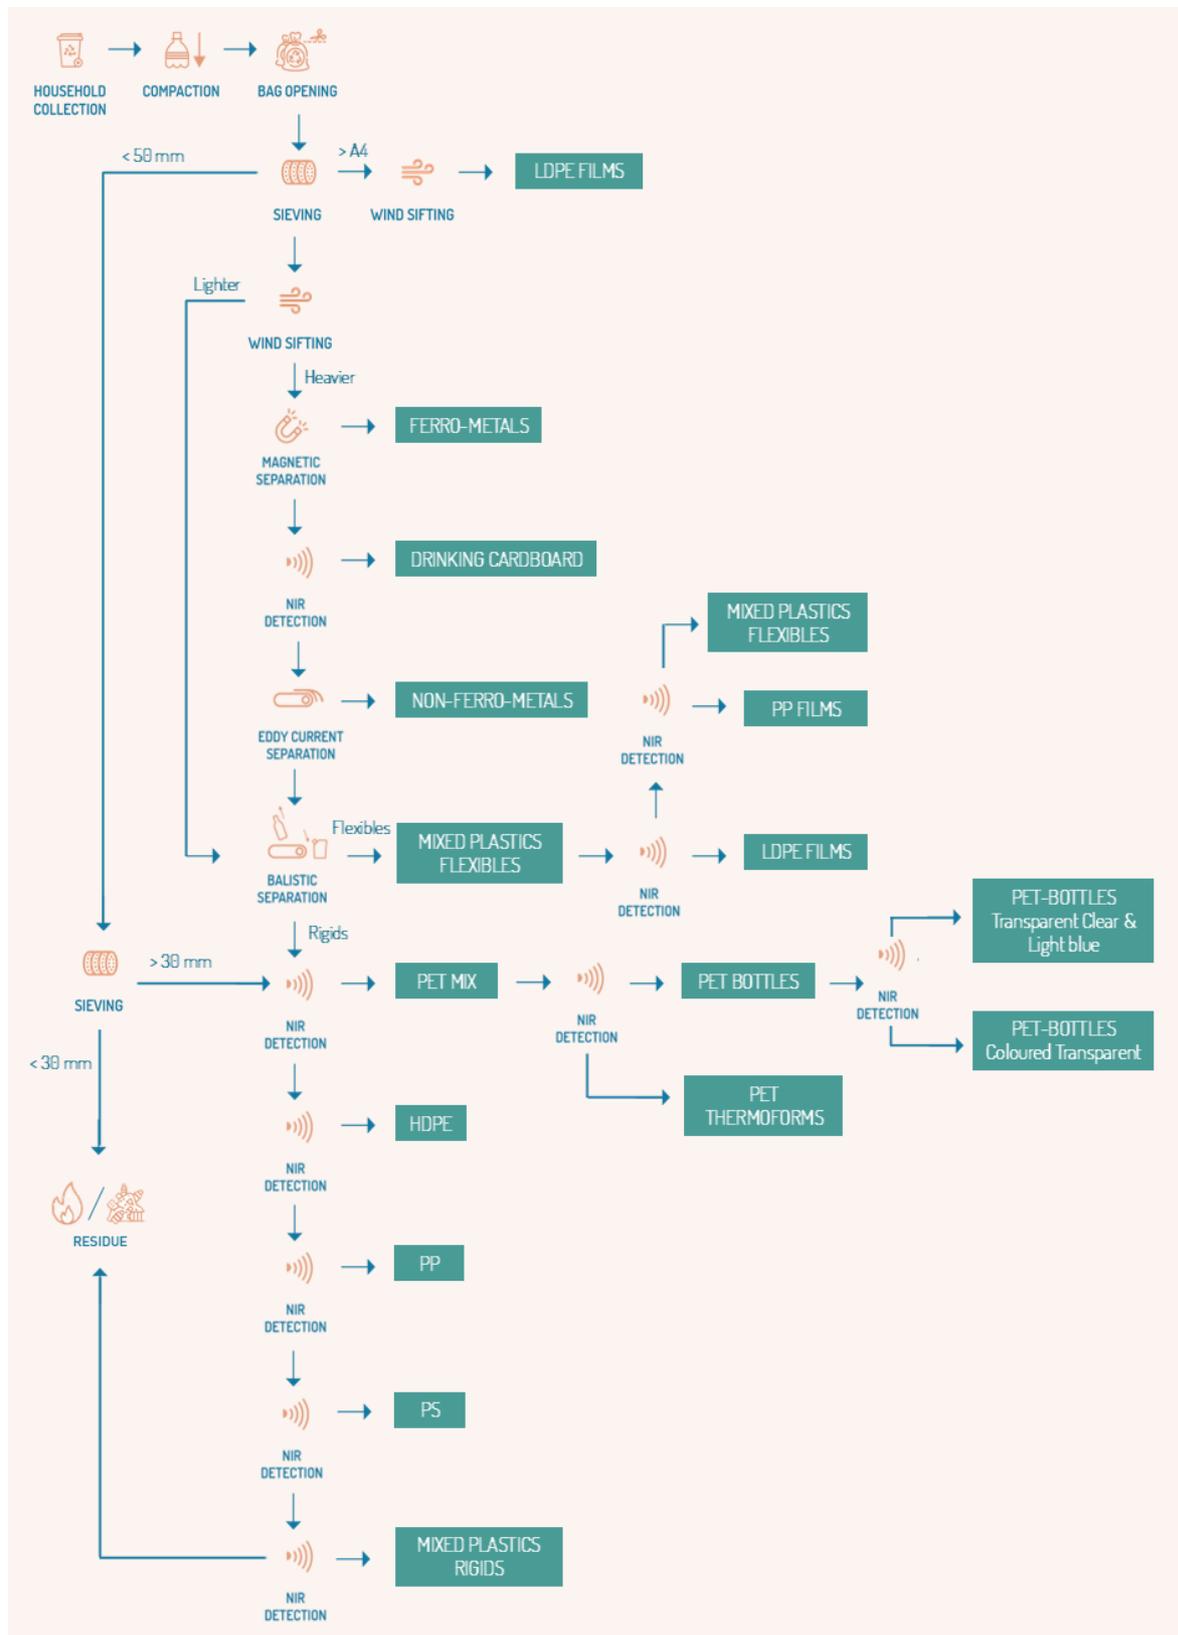


Figure 1. Methodology Diagram

4.1 SAMPLE SELECTION

For the purpose of the tests, the Applicant should provide at a minimum the quantities of samples described in Table 1.

Table 1. Number of samples for testing.

Type of packaging	Volume or dimension	Minimum Samples required
Rigid plastic bottles/containers/tubes	≥ 0.5 litres	50
Rigid plastic bottles/containers/tubes	< 0.5 litres	100
Rigid plastic tubes or thermoforms	At least one side ≥ 10 cm	50
Rigid plastic tubes or thermoforms	Sides < 10 cm	100
Foam or expanded foam packaging	≥ 5 cm; <50 cm	50
Flexible plastic packaging (films/pouches/bags)	At least one side ≥ 10 cm	50
Flexible plastic packaging (films/pouches/bags)	Sides < 10 cm	100

More packaging could be requested by the RecyClass recognised testing facilities, if necessary. It is worth pointing out that the packaging to be tested is not limited to one component but to the packaging as a whole. Therefore, the packaging must be submitted to the sorting centre as placed on the market with labels, adhesives, closure systems, liners, seals, valves, and any other components.

4.2 SAMPLE PREPARATION PROCEDURE

Household packaging waste enters the sorting process, crushed and folded due to transportation and logistics. To get a representative situation, the protocol must simulate the compression and the friction of the process as typically caused by truck compression and transfer. Typical compression rate applied by a truck during waste collection is 20 % of the waste volume collected.

It is noteworthy that consumer behaviour is not considered in the Protocol since it differs widely and is not representative of the way the packaging is disposed of and collected. Indeed, the same packaging can be discarded by the consumer as it is or flattened, emptied and cleaned or containing partial residues, depending on consumer behaviour, and/or based on brand or local authorities' recommendations.

- **All packaging must be provided by the Applicant with the closures on.**
- **It is mandatory to provide packaging filled with product in case the Easy-to-Empty⁴ or Easy-to-Access index is higher than 5 %.**
- **In case of semifinished packaging (RecyClass 'Letter of Compatibility'), it is not mandatory to provide packaging filled with product.**

⁴ [RecyClass Methodology](#)

4.2.1 GENERAL SAMPLE PREPARATION

The following steps should be considered by the RecyClass recognised facilities to prepare the samples for testing.

Procedure:

1. In case a certification body highlights issues with product residues (i.e., Easy to Empty index higher than 5 because of the packaging design or the product viscosity), the testing facility must require the Applicant to provide filled samples (exception for semi-finished packaging, i.e. RecyClass Letter of Compatibility) It is noteworthy that product residues can have an impact on the packaging sorting behaviour.
2. In case filled packaging is supplied, the packaging is emptied by the testing facilities following the RecyClass methodology and tested with the product residue. If not, step 2 can be skipped.
3. Packaging is crushed by applying pressure to simulate truck compression. In the case of flexible packaging, crumbling the packaging manually is enough.
Compression must be applied by using a compression machine. Pressure applied should be recorded in the report. The compression rate applied should be 1/5 at least.
 - 3.1 Homogenise the samples with other packaging waste.
 - 3.2 Introduce the packaging in the compression machine. In case the EtE index is higher than 5 %, use the packaging with product residues (semifinished packaging is exempted in this case).
 - 3.3 Ensure that the compression machine is fully filled. The share should be about 10 to 20 % of the packaging under testing vs other packaging.
 - 3.4 Compress the packaging to reduce the volume to 1/5.
 - 3.5 Open the press and mix the material; compress with the same settings three more times without interruptions.
 - 3.6 Separate interlocked packaging
 - 3.7 Record the pressure applied during the compression.
 - 3.8 Pictures before and after compression must be provided with the Report.

Sample identification:

The recognised facility must report information about the packaging in the following table:

Table 2. Report of the packaging conditions during the preparation procedures.

#	Number/Value	Note	Picture
Packaging used			
EtE index (only in case of finished packaging)			
Packaging compressed			
Packaging not or partially compressed			
Packaging with all components still on after compression			
Packaging without component 1 (specify component 1 ⁵)			
Packaging without component 2 (specify component 2)			

In case of packaging with partial removal of one component (e.g. partial removal of the sleeve, of the lid, of elements from the closures, etc.), figures and pictures must be provided.

⁵ Packaging component could be cap, closure system, label, sleeve, any other attachment.

4.2.2 INNOVATIVE PACKAGING PROVIDED WITH CELLULOSE-BASED COMPONENTS

In case of plastic packaging provided with unglued cellulose-based decorations, to simulate in a close way a realistic condition in terms of collection and transportation:

1. Store the emptied and crushed packaging in a collection bin.
2. After 7 days, mix the packaging and crush it once again.

Seven days is a typical period between the collection and the sorting of plastic packaging. During the 7 days, fibres can absorb moisture and exhibit different behaviour. The Protocols aim to determine the impact of such technologies on plastic packaging sorting.

Sample identification:

Pictures before collection, after collection, after contamination, after the 1st and 2nd compression steps must be provided with the report.

4.3 CHECK DIMENSIONS

After the compression and friction simulation, spread out crumbled packaging (and/or separated components) on a surface:

Rigid packaging

- Are at least two of the three dimensions (width, height, depth) < 50 mm? (For rigid packaging with a cylindrical shape, consider the dimension of the outer diameter)
- Is the packaging larger than 30 cm?

If **yes**, the item may be rejected or lost during sieve drum sorting. Therefore, a **Sieve Drum** Test should be performed.

Flexible packaging

- Is the area of the flattened⁶ surface < 100 cm²?

If **yes**, the item may be rejected or lost during sieve drum sorting. Therefore, a **Sieve Drum** Test should be performed.

Some sorting facilities in Europe are equipped with an extra sorting sieve with holes of about **30 mm**. The Applicant may request the sorting facility to run this extra step to better understand how the packaging will behave in such cases. In all other cases, it is assumed that the packaging will not face issues at the sieve drum and can continue onto the next sorting step.

4.3.1 SIEVE DRUM TEST

The Sieve Drum Test aims to remove small items that will fall through the holes of the sieve.

Procedure:

- Feed samples* to the conveyor belt with other packaging waste. The belt should feed the Sieve Drum.
(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)
- Count the number of samples passing on to the next sorting step.
- Add more samples when the outcome is ambiguous.

⁶ Flattened surface: Surface covered by a packaging when unfold, or when opened only on one side

RecyClass

- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the Sieve drum test:

- ✓ Materials being discarded as too small will end up in the **RESIDUE fraction**.
- ✓ Materials being discarded as too large will continue to the step "**The Wind Sifter**".
- ✓ Materials in between will also continue to the step "**The Wind Sifter**".

4.4 THE WIND SIFTER

The Wind Sifter creates an upward-facing airflow over the conveyor belt. This airflow sucks up the lightweight materials and separates them from the heavier material. The oversized materials (which passed the sieve drum) will move to the dedicated Wind Sifter.

Procedure for oversized materials (which passed the sieve drum):

- Feed samples* to the conveyor belt at the end of the Sieving Drum and before the dedicated Wind Sifter. Add the samples on the line whilst other packaging waste is on there as well.
*(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)*
- Observe and count the number of samples being sucked up by the Wind Sifter.
- Add more samples when the outcome is ambiguous.

Results of the Wind Sifter:

- ✓ Materials being sucked up by the Wind Sifter will end up in the **MIXED PLASTICS FLEXIBLE**.
- ✓ Materials not being sucked up by the Wind Sifter will end up in the **RESIDUE fraction**.

Procedure for other materials (which fell through the holes in the sieve drum):

- Determine the appropriate Wind Sifter (depending on size < or > 24 cm).
- Feed samples* to the conveyor belt after the holes of the Sieving Drum and prior to the dedicated Wind Sifter. Add the samples to the line whilst other packaging waste is on there as well.
*(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)*
- Observe and count the number of samples being sucked up by the Wind Sifter.
- Add more samples when the outcome is ambiguous.

Results of the Wind Sifter:

- ✓ Materials > A4 being sucked up by the Wind Sifter will end up in the **MIXED PLASTICS FLEXIBLE**.
- ✓ Materials < A4 cm being sucked up by the Wind Sifter will continue to the step "**The Ballistic Separation**".
- ✓ Materials over and under 24cm not being sucked up by the Wind Sifter will continue to the step "**The Magnet**".

4.5 THE MAGNET

Materials falling through the holes in the Sieve Drum and not being separated by the Wind Sifter go to the next step: the magnet. Based on the description in the required input data and sense-observation, the presence of ferrous metals in the packaging is checked:

1. If metals are found and it's uncertain if they are ferrous or non-ferrous, a quick test on the packaging is done with a small hand magnet.
2. If no ferrous metals have been reported or found with the magnet, the packaging will continue to the step "**NIR-Beverage Carton**".
3. Packaging containing ferrous metals is run through the following procedure.

RecyClass

Procedure:

- Feed samples* to the conveyor belt with other packaging waste. The belt should run towards the over-belt magnet.
*(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the Ferro-metals).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the Magnet:

- ✓ Materials sorted by the magnet will end up in the **FERROUS-METAL fraction**.
- ✓ Materials not sorted by the magnet will continue to the step "**NIR-Beverage cartons**".

4.6 NIR-BEVERAGE CARTON

Materials that pass the magnet continue to the next sorting step: the NIR for beverage cartons. Based on the description in the required input data and sense-observation, the presence of cardboard in the packaging is checked:

1. If no cardboard has been reported or found in the packaging, the packaging will continue to the step "**Eddy Current**".
2. Packaging containing cardboard is run through the following procedure.

Procedure:

- Feed samples* to the conveyor belt with other packaging waste. The belt should run towards the NIR for Beverage cartons.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the Beverage cartons fraction).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

NIR program:

The NIR program used for the test must be the one referenced in the site recognition. The program used should be reported in the results.

Results of the NIR-Beverage carton:

- ✓ Indicate settings used with reference to the sorting program.
- ✓ Materials sorted by the NIR for Beverage cartons will end up in the **BEVERAGE CARTON fraction**.
- ✓ Materials not sorted by the NIR for the Beverage carton will continue to the step "**Eddy Current**".

4.7 EDDY CURRENT

Materials that are not sorted by the NIR for Beverage cartons continue to the next sorting step: the Eddy Current. The goal of this step is to separate the packaging (components) made from (or containing) non-ferrous metals. Based on the description in the required input data and sense-observation, the presence of non-ferrous metals in the packaging is checked:

1. If no non-ferrous metals have been reported or visually identified, the packaging will continue to the step "**Ballistic Separation**".
2. Packaging containing or expected to contain non-ferrous metals is run through the following procedure.

RecyClass

Procedure:

- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the Eddy Current. Make sure the materials are placed on the belt prior to the point at which they receive the electrostatic charge.
*(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the non-ferrous metals).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the Eddy Current:

- ✓ Materials sorted by the Eddy Current will end up in the **NON-FERROUS METAL fraction**.
- ✓ Materials not sorted by the Eddy Current will continue to the step “**Ballistic Separation**”.

4.8 BALLISTIC SEPARATION

The Ballistic Separation aims to distinguish rigid (or 3D) packaging from flexible (or 2D) packaging. The materials passing step 6 will move into this process step.

Procedure:

- Feed samples* to the ballistic separator. Add the samples whilst other packaging waste is on there as well.
*(*Depending on the number of samples provided, use 20 from 100 or 10 from 50 samples)*
- Count the number of samples moving up and moving down.
- Add more samples when the outcome is ambiguous.

Results of the Ballistic Separation:

- ✓ Materials moved up, will end up in the **MIXED PLASTIC FLEXIBLES fraction**.
- ✓ Materials moved down, will continue to the step “**Static Test**”.

4.9 NIR STATIC TEST

Prior to running through the individual NIR-polymer-sorters, a static test with the material is performed.

Procedure:

- Use an empty NIR sorter and place a couple of samples on the non-rolling-conveyor-belt.
- Run the various NIR detection programs and verify on the screen which type of polymer the packaging is identified as by the NIR system. Check different angles and different-shaped samples (crushed).
- Check if the identification also activates the air nozzles.
- If the static test clearly identifies one type of polymer, continue to that specific sorting test: PET, PE, PP, PS, and mixed plastics.

4.10 NIR

The NIR programs used for the test must be the ones referenced in the site recognition. The programs used will be reported in the results. The site ensures that the program used is representative of European MRFs' standard settings. The speed of the conveyor belts should be set at 3 m/s, representing the typical speed used in European sorting plants.

4.10.1 NIR PET

Materials that pass the static test continue to the next sorting step: the NIR for PET. Based on the description in the required input data and sense-observation, the presence of PET in the packaging is checked:

1. If no PET has been reported or found in this packaging, the packaging will continue to the step “**NIR PE**”.
2. Packaging containing PET is run through the following procedure.

Procedure:

- Check that the program used is compliant with the accreditation requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for PET.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the PET).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR PET:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR PET will (depending on country and sorting facility) either end up in the general **PET fraction** or pass on to the step “**PET-bottles or PET-thermoforms**” for additional sorting in PET-thermoforms and PET-bottles.
- ✓ Materials not sorted by the NIR PET will continue to the step “**NIR PE**”.

4.10.2 NIR PET-BOTTLES OR PET-THERMOFORMS

Materials that were sorted as PET continue to the next sorting step: the separation of bottles from thermoforms. The packaging is run through the following procedure.

Procedure:

- Check that the program used is compliant with the recognition requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for PET-bottle/thermoform separation.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples being sorted as PET bottles (or, depending on the local situation, count the number of samples being sorted in the PET-thermoforms).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR PET-Bottles or PET-Thermoforms:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR PET-Bottles will end up in the **PET-BOTTLES fraction**.
- ✓ Materials sorted by the NIR PET Thermoforms will end up in the **PET-Thermoforms fraction**.

4.10.3 NIR PE

Materials that pass the NIR PET step continue to the next sorting step: the NIR for PE. Based on the description in the required input data and sense-observation, the presence of PE in the packaging is checked:

RecyClass

1. If no PE has been reported or found in this packaging, the packaging will continue to the step “**NIR PP**”.
2. Packaging containing PE is run through the following procedure.

Procedure:

- Check that the program used is compliant with the recognition requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for PE.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the PE).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR PE:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR PE will end up in the **PE fraction**.
- ✓ Materials not sorted by the NIR PE will continue to the step “**NIR PP**”.

4.10.4 NIR PP

Materials that pass the NIR PE step continue to the next sorting step: the NIR for PP. Based on the description in the required input data and sense-observation, the presence of PP in the packaging is checked:

1. If no PP has been reported or found in this packaging, the packaging will continue to the step “**NIR PS**”.
2. Packaging containing PP is run through the following procedure.

Procedure:

- Check the program used is compliant with the recognition requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for PP.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the PP).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR PP:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR PP will end up in the **PP fraction**.
- ✓ Materials not sorted by the NIR PP will continue to the step “**NIR PS**”.

4.10.5 NIR PS

Materials that pass the NIR PP step continue to the next sorting step: the NIR for PS. Based on the description in the required input data and sense-observation, the presence of PS in the packaging is checked:

1. If no PS has been reported or found in this packaging, the packaging will continue to the step “**NIR Mixed Plastics**”.
2. Packaging containing PS is run through the following procedure.

RecyClass

Procedure:

- Check that the program used is compliant with the recognition requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for PS.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the PS).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR PS:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR PS will end up in the **PS fraction**.

Materials not sorted by the NIR PS will continue to the step “**NIR Mixed Plastics**”.

4.10.6 NIR MIXED PLASTICS

Materials that pass the NIR PS step continue to the next sorting step: the NIR for Mixed Plastics Rigids. Based on the description in the required input data and sense-observation, the presence of recognisable polymers in the packaging is checked. The packaging is run through the following procedure.

Procedure:

- Check that the program used is compliant with the recognition requirements.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt which is running towards the NIR for Mixed Plastics Rigids.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples passing on to the next sorting step (or, depending on the local situation, count the number of samples being sorted in the Mixed Plastics Rigids).
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR Mixed Plastics:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR Mixed Plastics will end up in the **MIXED PLASTICS RIGIDS fraction**.
- ✓ Materials not sorted by the NIR Mixed Plastics will end up in the **RESIDUE**.

4.11 COLOUR MODULE

This module focuses on PET bottles, with the primary objective of analysing their colour sorting behaviour. The aim is to preserve the high value of the clear and light blue PET bottle stream by preventing contamination.

With the evolution of sorting centres in Europe, it is expected that such a module will be extended to other packaging streams.

The colour sorting test must demonstrate whether the bottle is sorted in the clear/light blue stream or in the coloured transparent one. Please note that the definition of coloured transparent streams may vary from one testing facility to another. A distinction between those coloured transparent streams will not be considered in this protocol (i.e. blue, green, turquoise, etc).

Penalties related to the incorrect sorting of bottles by colour will not apply, as the objective is to gather more technical information prior to applying any penalty.

Please note that Transparent Clear & Light-blue PET Bottles using full body sleeves can also utilise this procedure to prove whether the sleeve will hinder the recognition of the underlying container in the Transparent Clear & Light-blue PET Bottles stream. Clear and light blue PET bottles using a full body sleeve currently receive a class penalty. Therefore, companies may challenge this penalty with a colour sorting test (not mandatory).

4.11.1 LAB* COORDINATES

Lab* coordinates must be defined for mass coloured PET bottles before performing a colour sorting test. Applicants are responsible for providing the Lab* coordinates⁷. In the case of full body sleeves, no colour measurement is required before performing colour sorting tests.

Procedure:

Measure the Lab* coordinates of the bottle without contamination, with a proper spectrophotometer.

Procedure:

1. Cut out a piece of the bottle from the middle section approx. 5 x 5 cm. Choose a place on the bottle without decor and as flat as possible. If needed, clean off any remaining residues from the beverage or adhesive. For samples coming from the waste stream, wash them with a mild solvent (water, acetone) to remove dust or product residues.
2. Measure the wall thickness of the piece
3. Clamp the sample in the transmission holder so it covers the ball opening, with the bend against the opening
4. Measure the L*, a*, b* values using a proper spectrophotometer (preferably Konica Minolta CM-5 or similar), with the following settings: D65 light, 10°, transmittance mode di:0° (SCI)

A PET bottle will be considered as a clear/light blue bottle if the Lab* is as follows:

- $L^* > 89$
- $-3 < a^* < 2$
- $-4 < b^* < 2$

This is indicated by the light blue box in **Figure 2**.


In the case the bottle's Lab* falls in the limit of any of those values, proceed with a colour sorting test.

Testing applies to:

- $L^* < 89$
- Red and yellow areas in the chart below (**Figure 2**).

⁷ RecyClass Recognised facilities for the recyclability protocol could provide this service.

Figure 2. Chart indicating the testing area.

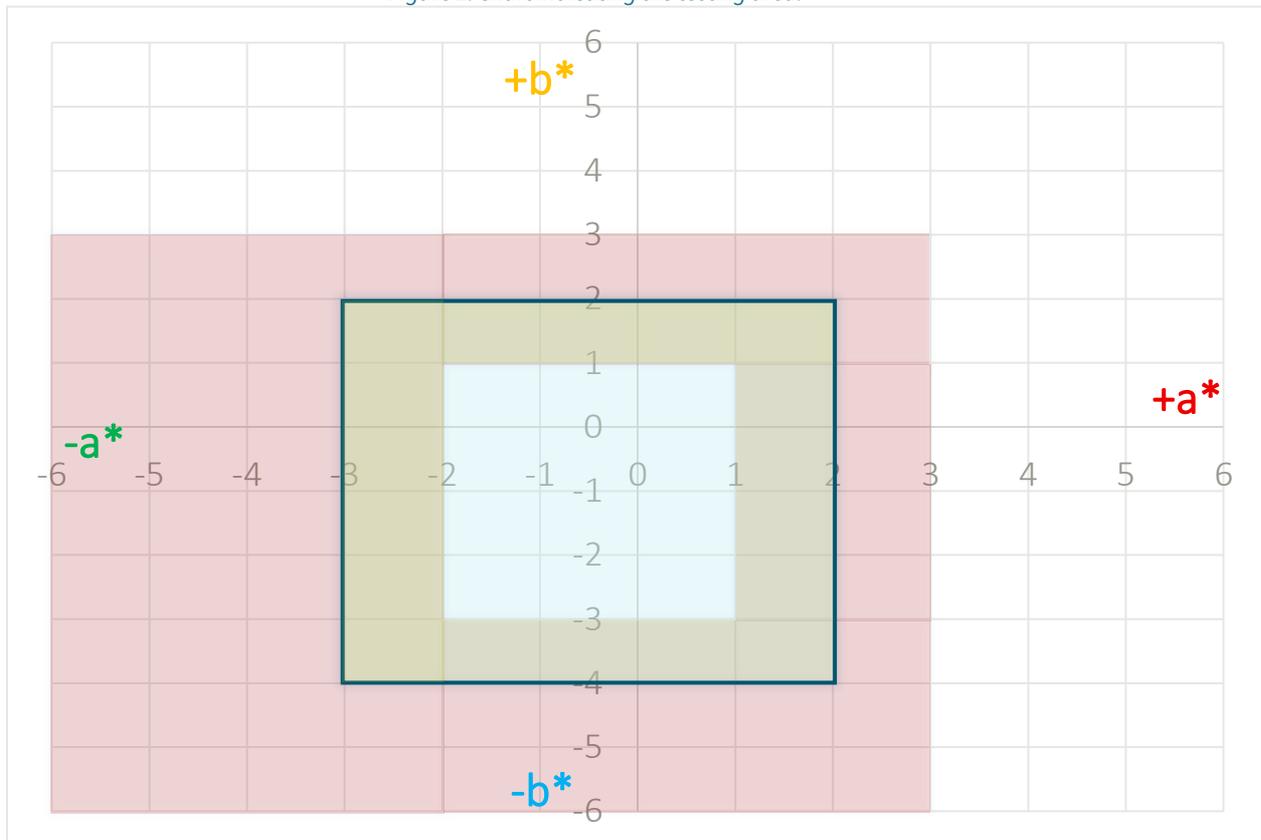

4.11.2 COLOUR SORTING – PET BOTTLES

Procedure:

- Check that the program used is compliant with the recognition requirements for PET clear/light blue bottles.
- Feed samples* to the conveyor belt with other packaging waste. This should be the belt running towards the NIR/VIS for the PET-bottle, clear/light blue.
*(*Depending on the number of samples provided, use 50 from 100 samples)*
- Count the number of samples being sorted as PET-bottle clear/light blue.
- Add more samples when the outcome is ambiguous.
- At least two people are required for this test (one feeding the process, one analysing the output).

Results of the NIR/VIS PET-Bottles:

- ✓ Indicate settings used with reference to the sorting program. Any deviation from the reference program should be reported.
- ✓ Materials sorted by the NIR/VIS Clear/Light blue PET-Bottles will end up in the **PET-BOTTLES Clear/Light blue fraction**.

4.12 REPORT CONTENT

The report should contain the following information:

- Reference to the Sorting Protocol.
- Description of the sorting facility: equipment and settings applied.
- A full and complete identification of the material tested with photographs.
- Description of the samples during each step.
- The photographs are welcome whenever useful for documenting specific situations.
- Details of any deviation from the test method, as well as any incident which may have influenced the results.
- Results.
- Conclusions, percentage of each fraction and recommendations (if any).
- Test figures. Use the tables below as a reference.

Table 3. Size sorting tests

Packaging reference	Packaging photo	Samples tested	> 5 cm Correctly sorted	< 5 cm Additional sieve	< 5 and > 3cm Re-enter process	< 3cm Residue / Fines

Table 4. Dynamic tests

Packaging reference	Packaging photo	Samples tested	Wind Sifter (LDPE films)	Ferrous metals	Drinking Cardboard	Non-Ferrous metals

Packaging reference	Packaging photo	Samples tested	Ballistic separation		Flexible MPO		
			Flexibles	Rigids	PE flexibles	PP flexibles	Mixed plastic flexibles

Packaging reference	Packaging photo	Samples tested	PET		PE rigids	PP rigids	PS rigids	Mixed plastic rigids	Residual fraction
			PET-Bottles	PET-Thermoforms					

4.13 RESULTS INTERPRETATION

To guide the auditor in the results interpretation, the sorting centre should apply the following rules:

- In case the packaging ends in the mix of rigid or mixed flexible streams, the test fails. The packaging is considered disqualified for recyclability.
- In case the packaging ends in a polymer stream, the test is passed if more than 50 % of the packaging ends in the stream corresponding to the resin used for the packaging body; in this case, the following rules are applied by the auditor:

- ✓ **sorting efficiency higher than 80 % and the rest not sorted (residues) or sorted in the mixed streams:** the packaging is fully sortable, and no penalties are applied; if more than 10 % is sorted in another stream 1 class penalty is applied.
- ✓ **sorting efficiency lower than 80 % but higher than 70 %, with the rest not sorted (residues) or sorted in the mixed streams:** the packaging is sortable with minor inefficiency, and 1 class penalty is applied; if more than 10% is sorted in another stream, 2 class penalties are applied.
- ✓ **sorting efficiency lower than 70 % (but higher than 50 %) with the rest not sorted (residues) or sorted in the mixed streams:** the packaging is sortable but with low efficiency, and 2 class penalties are applied.
- ✓ **sorting efficiency lower than 70 % (but higher than 50 %) with more than 10 % contaminating another polymer stream:** the test fails, and the packaging is disqualified for recyclability.

Results will be summarised in one table, indicating the flow of materials and the efficiency in each of the different steps, as explained in the Protocol and pictured in Figure 1.

In case the sorting efficiency is lower than 50 %, the tests fail, and the packaging is disqualified for recyclability.

The table below summarises the test results and should guide the applicant and the auditor in the interpretation of the results.

Table 5. Sorting efficiency results

Sorting efficiency	Contamination in another mono-stream	Test Results	Penalties (classes)
≥ 80 %	≤ 10 %	Passed	-
≥ 80 %	> 10 %	Passed	-1
70-80 %	≤ 10 %	Passed	-1
70-80 %	> 10 %	Passed	-2
50-70 %	≤ 10 %	Passed	-2
50-70 %	> 10 %	Failed	Disqualified
<50 %	n.a.	Failed	Disqualified

RecyClass

Table 6. Sorting efficiency results – Colour sorting of Transparent, Clear & Light-blue PET Bottles using full body sleeves

Sorting efficiency in the Transparent Clear & Light-blue PET Bottles	Test Results	Penalties (classes)
≥ 80 %	Passed	-
< 80 %	Passed	-1

ANNEX I

It is essential for certain types of packaging to be tested according to the RecyClass Sorting Protocol, as their design can affect either partially or fully the packaging sortability, leading to the loss of materials.

The packaging is designed with the following characteristics⁸ must be tested to determine the sensor-based sorting efficiency:

- Large labels (covering > 50% of the surface) made from a different polymer
- Full body sleeves
- Perforated full body sleeves
- Multi-layer structures (excluding PE/PP EVOH)
- Metallisation
- Non-NIR detectable colours on the packaging (i.e., when dark colours are used for internal layers)
- Different types of plastic are used on the top and bottom sides of the packaging, as presented on the belt
- Different types of plastic (rigid and flexible) used in the packaging
- Ferrous magnetic components (disqualifying criterion for recyclability assessment)
- Non-ferrous magnetic components
- Round shape, very rigid and hard to compact
- Foam and expanded foam packaging
- Small sizes according to the Section Check Dimensions 4.3

⁸ For detailed information, refer to RecyClass Recyclability Methodology where mandatory sorting test designs are listed. Design features reported as low/non compatible with recycling should not be tested for sorting because the recyclability of the packaging will remain low in any case.

ANNEX II

Since some packaging designs reported in Annex I do not have problems in the previous steps of the sorting protocol, there is the possibility of performing only the static and dynamic NIR tests, without the need to run the full protocol.⁹

- Large labels (covering > 50 % of the surface) made from a different polymer than the container.
- Full body sleeves.
- Perforated full body sleeves.
- Multi-layer structures (excluding PE and PP with EVOH).
- Metallisation.
- Non-NIR detectable colours on the packaging.
- Different types of plastic are used on the top and bottom sides of the packaging, as presented on the belt.

⁹ *Sample preparation procedures remain valid for all packaging, including compression.*

DOCUMENT VERSION HISTORY

VERSION	PUBLICATION DATE	REVISION NOTES
1.0	September 2021	Sorting Evaluation Protocol for Plastic Packaging release
2.0	January 2024	Modification of the compaction procedures Modification of sample preparation procedures Addition of Annex II
3.0	February 2026	Addition of the colour sorting module for PET bottles Clarification on sample preparation procedures Clarification of the scope of Annex II

RecyClass

Avenue de Broqueville 12
1150 Brussels – Belgium

Phone: +32 2 786 39 08
info@recyclclass.eu

www.recyclclass.eu